



Flowline Starter for Camera & Gimbals (B-FLCM-FLN-01)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Body Support



4 x Washers



2 x CSK Bolt (Size: - 7.3mm)



2 x Velcro

2.5mm L-Type Allen Key



Bag Packing



Flycam Flowline Starter Body Rig

INDEX

Sr. No	Particulars	Page No.
1	Support Bar Assembly	4
2	Support Bar Height Adjustment	5-6
3	Camera Mounting	6
4	Final Setup	7

Flycam Flowline Starter Setup

Note: It is recommended to attach the minimum required weight (3kg / 6lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

Note: Using Placid (FLCM-FLN-PLA) or Edge V1 (FLCM-EDGE-V1) with this Flowline model will impact the minimum and maximum payload capacities.

Support Bar Assembly

- Join the Support Bar with Body Support in the push-fit technique.
- Your Jacket is ready to use.



Support Bar Height Adjustment

- Loosen all four Adjustment Knobs provided on the back of the Support Jacket.
- Then, move the Support Bar upwards or downwards as per your requirement.




- Once the Support bar is at the desired height, re-tighten all four Adjustment Knobs to secure it.



Height Adjustable Support Bar



- Put on the Support Jacket and tighten the buckles provided at the waist and chest.

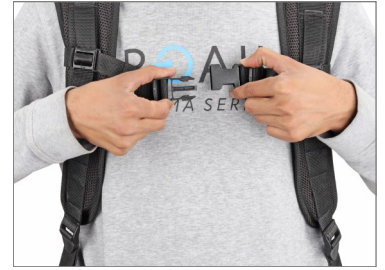

- Adjust the Jacket at your convenience.



Camera Mounting

- Attach the Camera (**Not Included**) to the hook and securely tighten the provided knob to ensure a slip-free connection.



NOTE: To ensure the optimal performance of your Flycam Flowline system, it is crucial to attach the minimum required weight (3kg/6.6lb) for pulling down the balancing rope. This will guarantee smooth and stable operation.



- Use the knob at the back of the Body Support to tighten the tension as needed.



**YOUR FLYCAM FLOWLINE STARTER FOR CAMERA GIMBALS
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does **not** cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.