

FLYCAM Flowline Master Female with Pro Vest (FLCM-FLN-MSTR-FM)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

Note: If you have purchased (FLCM-FLN-MSTR-FM), you will get a jacket that fits small, medium, and large sizes. If you have purchased (FLCM-FLN-MSTR-FM-01), you will receive a jacket that fits the XL and XXL sizes. The assembly point will remain the same in both jackets.



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Flowline Master Female Setup

NOTE: It is recommended to attach the minimum required weight (4kg / 9lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

NOTE: Using **Placid (FLCM-FLN-PLA)** or **Edge V1 (FLCM-EDGE-V1)** with this Flowline model will impact the minimum and maximum payload capacities.

- Join section-1 of the support bar to section-2 with a simple push-fit technique.



- Overlap both sides of the vest (chest area) through the provided Velcro, then adjust and buckle them up as per your requirements.



- You can stretch or loosen the adjustment strap of the jacket, Then adjust until you find it comfortable as shown in the image.



- Overlap both sides of the vest (waist area) through the provided Velcro and buckle them up as per your requirements.



- Adjust or tighten the vest around the waist area through the provided strap.




- Use the strap to adjust the chest Velcro properly, Then adjust until you find it comfortable and you can set the side support adjustment rods according to your body type.

Note: The side support adjustable vest rods on the sides enable a comfortable fit for all body types.

- For proper fitting from the shoulder, pull the strap down from the backside, as shown in the image.



- Loosen the knob of the camera hook and attach the camera to it. Tighten the knob to ensure a slip-free connection.

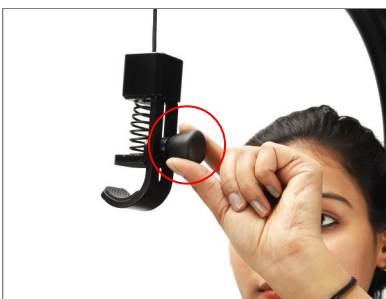

- Attach the vest safety hook to your camera, as shown in the images, for more safety & protection.



- Rotate the tension adjustment knob anti-clockwise to adjust the tension according to the weight of your setup.

Note: You can change the spring tension to balance the load placed on the suspension rope by turning the knob on the back of the jacket.

CAUTION: Do not release the lever without removing the setup. It may result in severe damage to the camera.



**YOUR FLYCAM FLOWLINE MASTER FEMALE WITH PRO VEST
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does **not** cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.