



Flowline Master with Pro Vest (FLCM-FLN-MSTR-03)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Flowline Master with Pro Vest



2 x Velcro (1ft each)



1 x Allen Key L-Type
(Size: - 2.5mm)



Bag Packing

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Flycam Flowline Master



Flycam Flowline Master Setup

Note: It is recommended to attach the minimum required weight (4kg / 9lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

Note: Using **Placid (FLCM-FLN-PLA)** or **Edge V1 (FLCM-EDGE-V1)** with this Flowline model will impact the minimum and maximum payload capacities.

Support Bar Assembly

- Insert the support bar into the body support using the push-fit technique.
- Ensure the bar is securely fitted into the vest.




- Your vest is now assembled with the support bar securely attached.



Support Bar Height Adjustment

- Loosen all four adjustment knobs on the back of the support vest.
- Adjust the support bar upward or downward to the desired height.

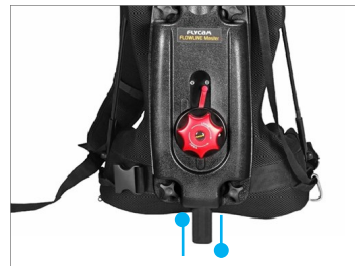

- Retighten all four knobs to secure the bar in place.



Height Adjustable Support Bar




Side Support Adjustment

- Rotate the side support rod 360° to adjust the body support fitment.



- Loosen or tighten the side support as required.

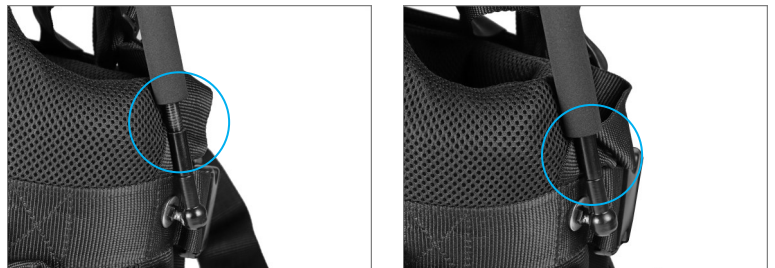

- Put on the support vest and fasten the waist and chest buckles.



- Adjust the vest as per your comfort.



Camera Mounting

- Attach the Camera (Not Included) to the hook and tighten using the provided knob to ensure a slip-free connection.





Note: It is recommended to attach the minimum required weight (4kg / 9lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.



- Use the balance adjustment knob to fine-tune the balance by turning it counterclockwise according to your setup's weight.

Caution: Always remove your setup before releasing the lever to avoid serious damage to the camera.

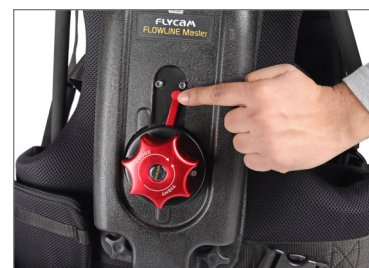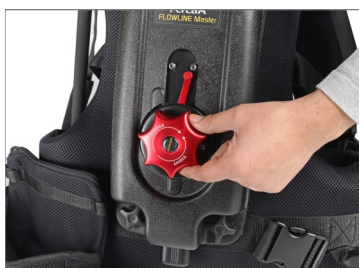

Note: You can slide the knob forward or backward to adjust the camera's position for optimal balance



**YOUR FLYCAM FLOWLINE MASTER WITH PRO VEST
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.