

FLYCAM Flowline Placid 2-Axis Stabilizing Arm (FLCM-FLN-PLA)

Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Safety Shock Cord



Tension Spring

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Flowline Placid Setup

NOTE: Using any compatible Flowline model with the Placid will impact the minimum and maximum payload capacities.

- Remove the hook from Flowline support bar (**Not Included**).



- Take the cord bundle out from the cup and pull the whole cord until a cord lock comes out.




- Separate the cord from cord lock and keep the lock aside for attaching it back afterwards.



- Separate the cord also from the cup and keep aside for mounting it back later.



- Use a tool to unscrew small bolts that hold the front pulley, from each side.

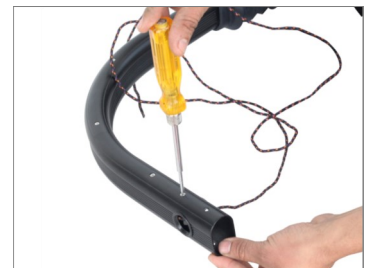

- Pull out the front pulley carefully, so it doesn't drop into the Flowline support bar and Insert the cord from the bottom hole and take it out from the top hole.



- Mount front pulley in between the cord, and pull the cord so that it goes back inside the support arm. Again use tools to tighten the bolts from each side and set the pulley at its position.




- Turn the Placid Arm upside down. By using an allen key, loosen the mounting bracket of Arm. Now the bracket has enough space for the cord to pass through it.



- Insert cord into the mounting bracket. Make sure that it is going exactly in the centre, up into the hole of the Placid arm. Then Pull the cord from bottom of Placid arm, near the spring, while still holding it upside down.




- Now you can hold the Placid arm in its standard position. The cord is aptly set to perform its function. By using an allen key, tighten the mounting bracket of Placid Arm with Flowline support arm.

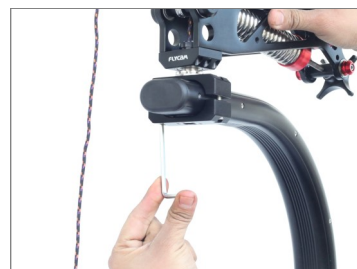

- To fix Placid arm at its appropriate position, attach one side of Safety Elastic Cord to a knob on Placid arm. Then, drag the other side of elastic cord across Flowline support arm, and attach to the knob on other side of Placid arm.



- Put-in the cup back through the cord and relock it with the cord lock. Roll the leftover cord inside the cup.

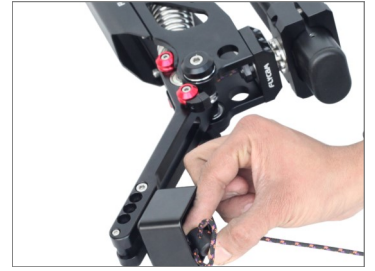

- Fix the hook back at its actual position, using an allen key. Now Set the provided Spring again in the hook.



- Wear support jacket and tighten the buckles provided at the waist, adjust as per your convenience. Tighten the buckles provided at the chest of support jacket, and adjust as per your convenience.



- By adjusting side support, you will move the weight on your hips, thus resulting in comfortable long hour shooting.



- Loosen the knob of hook and attach camera to it. Tighten with provided knob to ensure slip-free connection.



Install Flycam Flowline Placid and change the Spring, Follow this
<https://bit.ly/3Ae0t7a>

**YOUR FLOWLINE PLACID 2-AXIS STABILIZING ARM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does **not** cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.