



Flowline Starter with Edge V1 Stabilization Arm (FLCM-FLN-EGV1)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Flycam Flowline Starter Vest



2 x Washers



2 x Velcro



2mm Allen Key



2.5mm Allen Key



Edge V1 Arm




Bag Packing

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Features:

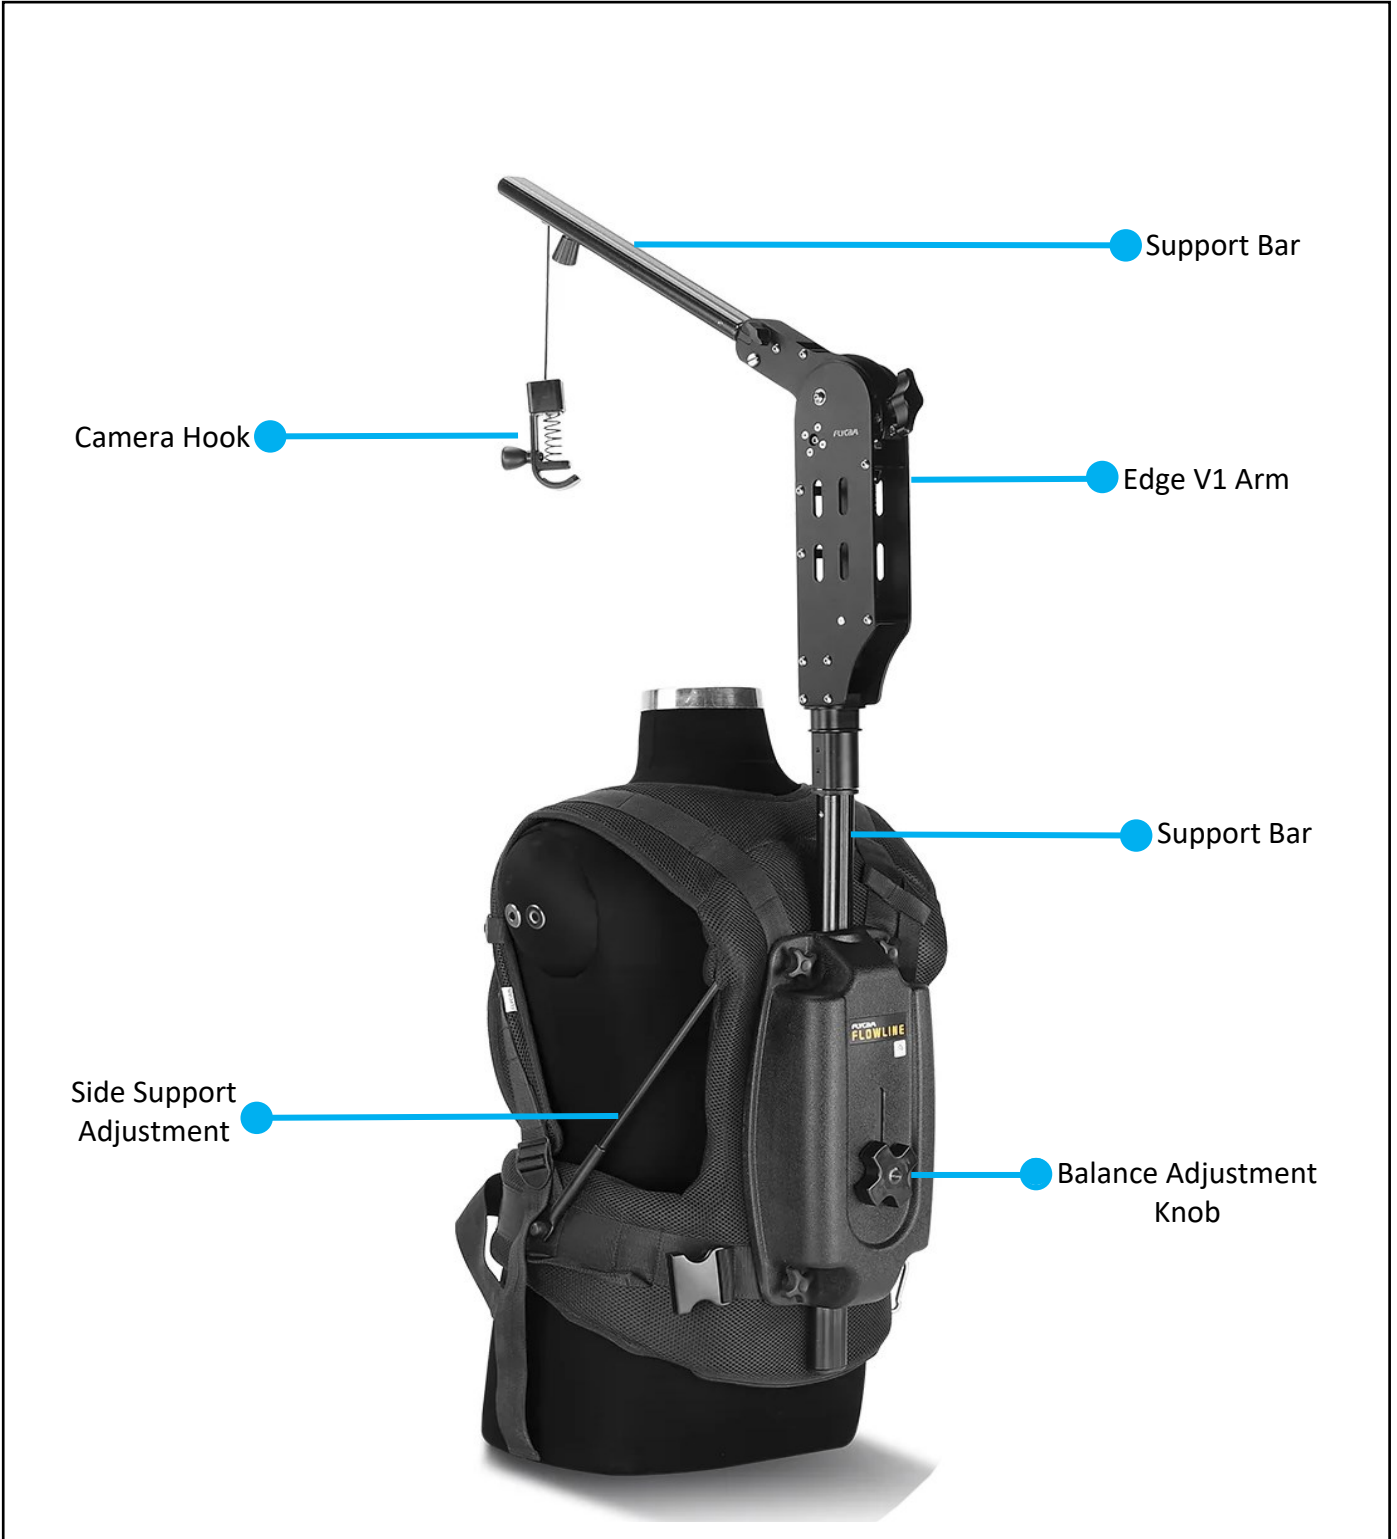

Flycam Flowline Starter with Edge V1 Arm

Flowline Starter with Edge Setup

NOTE: It is recommended to attach the minimum required weight (3kg / 6.6lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

Support Bar Adjustment

- Loosen the knob of the Flowline Edge.



- After loosening the knob, remove it and pull the rod of Flowline Edge to open it.

Feature: Foldable Design of Flowline Edge makes it easier to store.




Edge V1 Arm mounting on Flycam Flowline Starter Vest

- Properly attach the Edge to the flowline vest.



- After opening the Rod, insert the knob and properly tighten it, as shown in the image.

Feature: Tension adjustment knob to match your rig's weight, while the adaptable sliding knob adjusts the support rope to your unique filming needs.

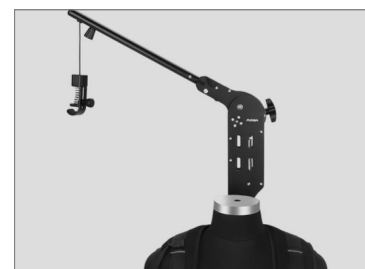

- The Flowline Edge is fully assembled with the Stabilization Arm. The versatile belt system molds to fit all body types.



Support Bar Height Adjustment


- Loosen all four Adjustment Knobs provided on the back of Support Jacket.
- Then adjust the height (upward/downward) of support bar.
- Once the support bar is at a desired height re-tighten all four Adjustment Knobs to secure it.



Height Adjustable Support Bar



- Put on the support jacket and tighten the buckles provided at the waist and chest.

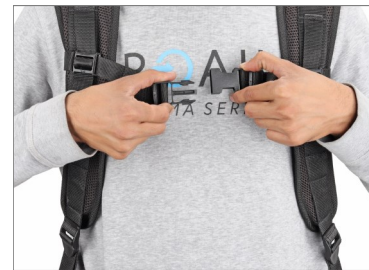

- Then, adjust the jacket as per your convenience.



Camera Mounting

- Attach the Camera (**Not Included**) to the hook and tighten using the provided knob to ensure a slip-free connection.



- Your setup is ready to use.



Adjust Camera Setup Position

- Loosen the knob at the support bar to adjust the camera setup position.



Adjust Camera Setup Position




Spring Tension Adjustment

- Loosen the knob at the Edge V1 arm to adjust the spring tension.

Feature: The tension adjustment knob allows you to fine-tune the arm's spring tension to your rig's weight, while the adaptable sliding knob adjusts the support rope to meet your unique needs.



Low / High Angle Shots

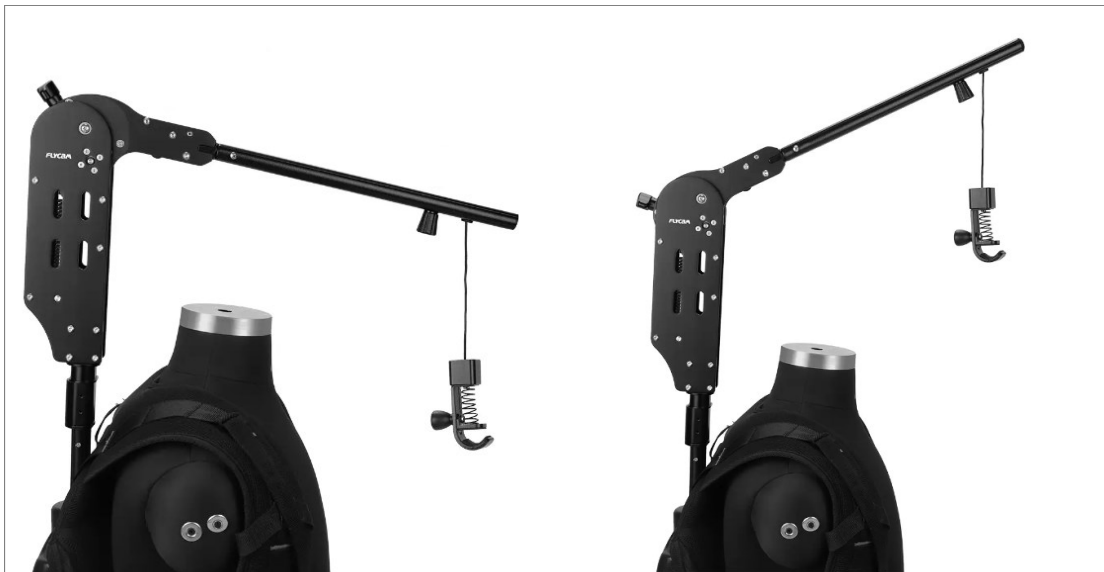

Capture Every Angle (180° Rotation)



YOUR FLYCAM FLOWLINE STARTER WITH EDGE V1 STABILIZATION ARM ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does **not** cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.