



Galaxy Arm Vest with HD-3000 Stabilizer (GLXY-AV-HD-3)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Galaxy Vest



Galaxy Arm



HD-3000 Stabilizer



Metal Quick Release



2 x Heavy Tension Springs (Red)



V-shape Adapter



Table Clamp



belt



Knob



Plastic screwdriver



M4x10 Allen Bolt



Camera Bolts



Camera Platform



1 x Allen Key L-Type (Size: - 2.5mm)



Washer



2 x 16mm Plastic Bush (OD-22mm)



Mounting bracket



Storage Bag

INDEX

Sr. No	Particulars	Page No.
1	Stabilizer Setup	4
2	Adding Weights & Positioning for Proper Balance	4-5
3	Stabilizer Arm & Vest Setup	5
4	Tension Springs Replacement	6-7
5	Tension Springs Removal	6-7
6	Tension Springs Attachment	7-8
7	Arm Adjustment	8
8	Position arm	8
9	Maintenance	8
10	Final Setup	9

Stabilizer Setup

- Attach the Central Post to the Base Platform using the threaded stud at the center. Rotate the base platform until it is securely fastened to the central post.



- Loosen the Allen bolt at the bottom of the Camera Plate using a 2.5mm Allen Key. Align the plate holes with the top of the central post and re-tighten the bolts to secure it.



Note: The camera can also be mounted directly to the Head Plate.

- Remove the Head Plate from the 3-piece Head Assembly to attach it to your camera.
- Multiple mounting holes are provided to accommodate various cameras.
- Position the camera centrally on the Head Plate and secure it firmly.
- Do not overtighten, as this may damage the threaded insert.

Note: You can also mount your camera using Quick Release Plate.

- Open the lever and remove the quick release plate from the adapter.
- Attach the plate to your camera using a screwdriver (**Not included**).
- Mount the camera assembly onto the adapter and lock it by tightening the lever.



Adding Weights & Positioning for Proper Balance

- Mount the counterweights on the base platform using two BH bolts with knobs on both sides of the central post.



The purpose of the counterweight system is to balance the weight of the camera and accessories mounted at the top with the stabilizer base at the bottom, using the gimbal handle as the pivot point.

Heavier camera setups require additional counterweights. When adding weight to one side of the central post, add an equal amount to the opposite side to maintain horizontal balance.

Stabilizer Arm & Vest Setup

- Put on the vest and insert the hooks of the straps into the appropriate buckles.
- Tighten both straps using Velcro for a comfortable fit, then secure them with the buckles.



- Adjust the chest plate height according to the operator's height using the adjustment screw.



Note: When properly adjusted, the vest should fit as shown in the reference image. The straps are made from durable nylon and industrial-strength Velcro and can be easily replaced or adjusted to suit individual requirements.

- Loosen the knobs and insert the arm's male socket into the vest's female socket as shown in the image.
- Tighten the knobs securely.
- Your Galaxy Stabilizer Arm & Vest assembly is now ready for use.



- Install the Stabilizer in the Galaxy arm.



- Your setup is ready.



Tension Springs Replacement

Tension Springs Removal

- Loosen both arm knobs.



- Using a 3mm Allen key, remove the first arm bolt.



- Remove the second arm bolt.



- Loosen the knob and detach the arm.



- Using a 3mm Allen key, loosen the bolt.



- Remove the bolt.



- Push through the hole using a 3mm Allen key.
- Remove the bolt from the other side.



- Remove the washer.



Tension Springs Attachment


- Rotate the spring and remove it.



- Attach the blue spring and rotate it into position.



- Use a 3mm Allen key to align the arm and spring.

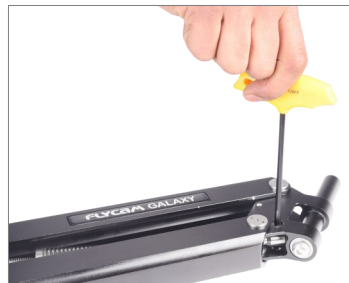

- Insert the washer.



- Tighten both bolts securely using the 3 mm Allen key.



- The arm is now ready for use.



Arm Adjustment

The arm tension is preset for the maximum recommended camera weight so that the arm does not bottom out when the camera and sled are first mounted.

To fine-tune the arm for your camera weight:

- Move the arm to the middle of its booming (up-and-down) range and release it.
- If the arm remains in position, you are close to the correct adjustment.
- Make small tension adjustments until the camera neither rises nor falls when released in the middle of the booming range.

Position arm

- Move the camera to your left side so the arm crosses your body.
- Adjust the arm arc until the rig feels comfortable.
- Keep the camera close to your body for better control and reduced fatigue.

Maintenance

Bearing Maintenance

The Flycam GALAXY Arm contains bearings. If, after some time, your bearings no longer turn as smoothly as when new, you can lightly oil them with a few drops of light lubricating oil. We recommend using only a minimal amount, as too much oil may drip from the bearings onto the rest of your Galaxy Arm. Be sure to keep the oil away from your camera and clean up any spills when finished.

Cleaning

Do not use solvents or harsh cleaners on your Flycam Galaxy Arm & Vest. If the unit becomes dirty, gently clean it with a cloth or sponge using water and a very mild detergent, then rinse thoroughly.

Storage

If you plan to store your Flycam Galaxy Arm & Vest for an extended period, store it upright in a dry area with low to normal humidity whenever possible. If such an environment is not available, place the unit in an airtight plastic container or bag. Storing it upright helps reduce stress on the system.

**YOUR FLYCAM GALAXY STABILIZER ARM & VEST WITH HD-3000
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.