

PROAIM

14ft Camera Crane Jib Arm (P-14)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Front Section 1



LCD Monitor Arm



Section 2



Weight Closures



Middle Section 2



Weight Shank



End Section



Tools Bag



Spanner (Size:17mm) x 2
Spanner (Size:13mm) x1



Allen Key (Size:6mm)



Central Post



Bag

INDEX

Sr. No	Particulars	Page No.
1	Central Post Assembly	4
2	Middle Jib Section Assembly	4-5
3	Front Jib Section Assembly	5-6
4	End Jib Section Assembly	6-7
5	Bush Setup Assembly	7-9
6	LCD Monitor Assembly	9-10
7	Final Setup	11

Central Post Assembly

- Place the central post on top of a stand (Not Included).



- Insert the knob into the designated slot on the central post and tighten firmly.



- Remove the bolt from the central post for the next assembly step.




Middle Jib Section Assembly


- Open the Middle Section of the jib and place it atop the central post.




- Insert the screw through the jib section.

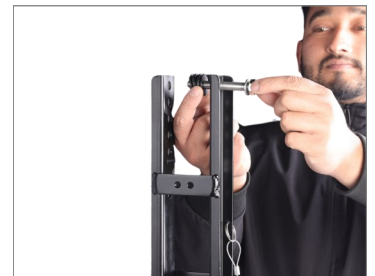

- Attach the washer followed by the bolt.

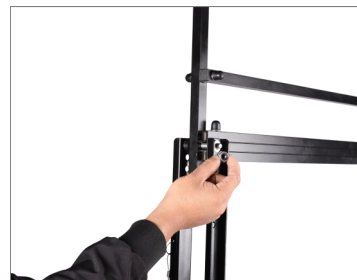

- Tighten securely using a 17mm and 13mm spanner.

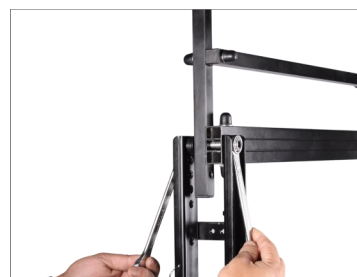

- The jib is now firmly secured to the central post.




■ Front Jib Section Assembly


- Remove all caps from the front section.





- Loosen bolts with a 6mm Allen key and 13mm spanner; remove bolt and washer.

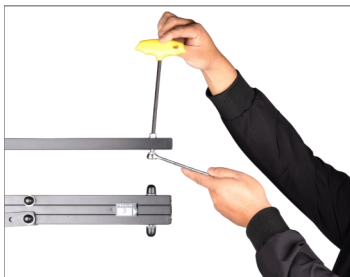

- Attach the middle section to the front section.

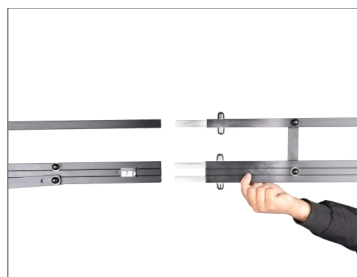


- Insert the screw into the middle section.

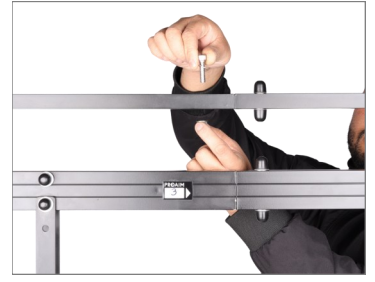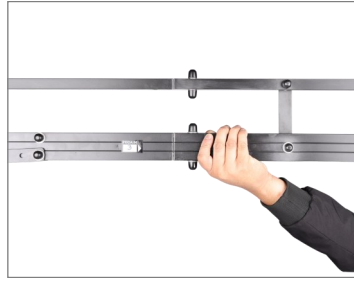

- Tighten the screw using a 6 mm Allen key.




- Reattach the screw cap to secure the assembly.

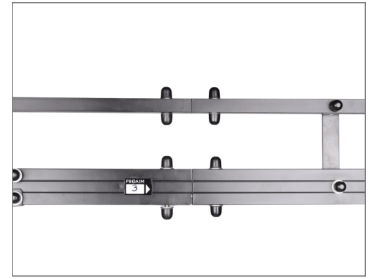

■ End Jib Section Assembly



- Remove the front section cap.

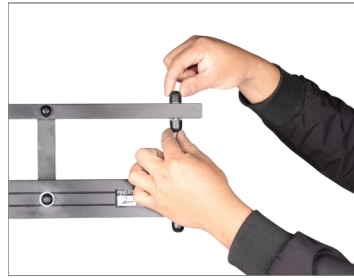

- Loosen and remove bolts using a 6mm Allen key & 13mm spanner.




- Attach the front section to the end as shown in the image

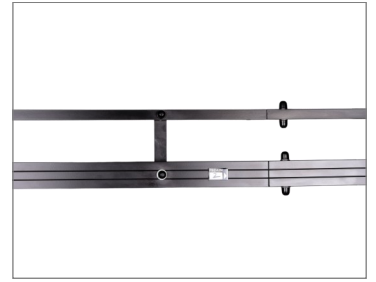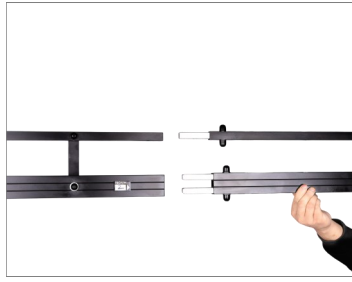

- Insert both screw into the designated hole.
- Tighten the bolt using the 13mm spanner and 6mm Allen key.



- Reattach all four screw caps to the assembly.

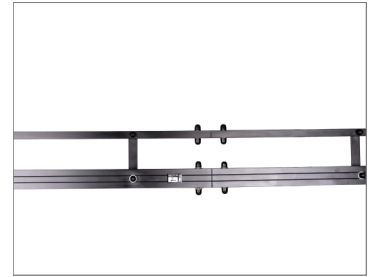

■ Bush Setup Assembly

- Remove bush caps from both ends.



- Loosen and remove the bolt and washer using a 13mm spanner and 6mm Allen key.





- Align the bush with the jib section and insert the screw through the aligned holes.




- Place the washer onto the screw.
- Insert the bolt and secure it in position.




- Tighten the bolt firmly using the 13mm spanner and 6 mm Allen key, as shown in the image.

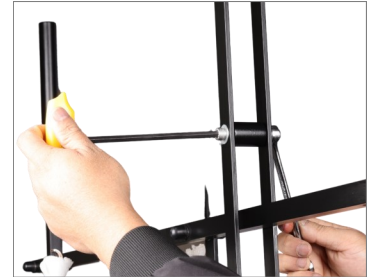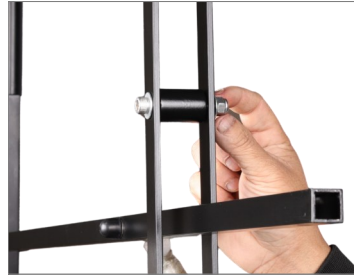



- Reattach the bush caps on both sides.

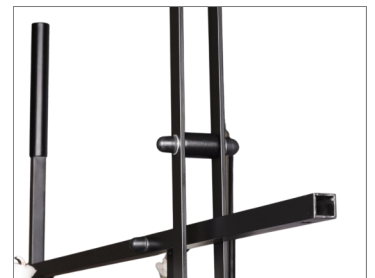

- Route the front section wire to the end section.
- Loosen the turn buckle on the end section.

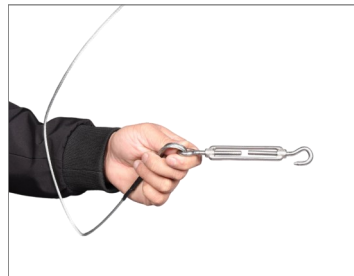

- Loosen the turnbuckle on the end section and attach it to the front section wire.
- **Note:** This wire is adjustable.

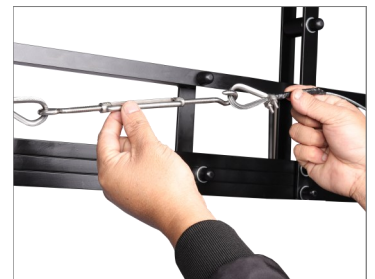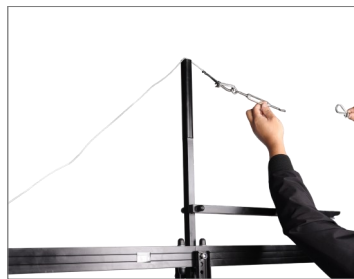

- The wire is now securely attached to the jib.



- Insert the weight shank into the hole on the end section



- Attach the weight (Not Included) onto the shank.



- Attach the weight closures to the weight shank.

Note: The weight closures rotate 360° and automatically slide into position.



■ LCD Monitor Assembly

- Loosen the knob on the LCD monitor arm.



- Remove the knob and attach the monitor arm to the central post.



- Place the washer in position.
- Reattach and firmly tighten the knob.



- Mount the monitor (Not Included) onto the LCD monitor arm.
- Tighten the knob to secure the monitor.



- The monitor is now fully assembled on the LCD monitor arm.



**PROAIM 14FT CAMERA CRANE JIB ARM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does **not** cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.