

PROAIM


Proaim 15mm Universal Quick Release Camera Baseplate with Dovetail (QR-UD15)



All rights reserved.


No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ Features

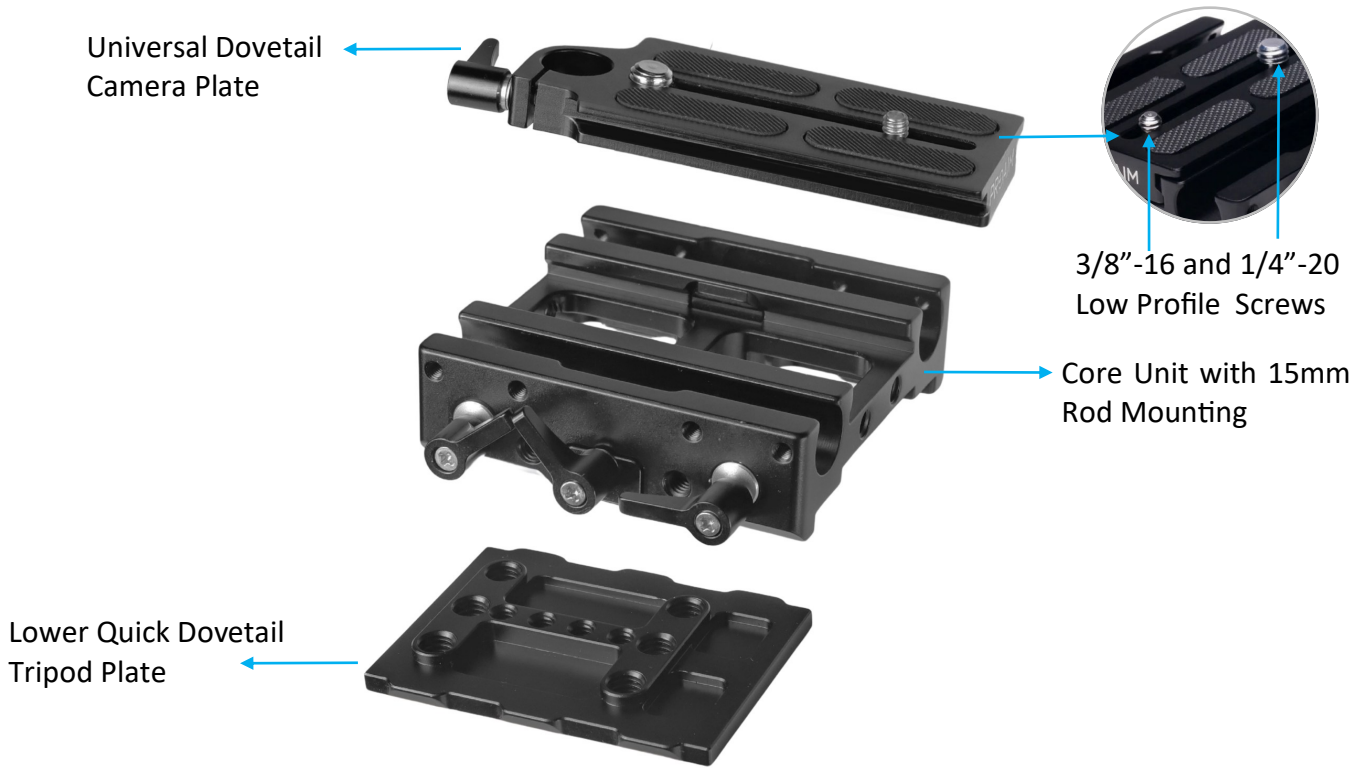

■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

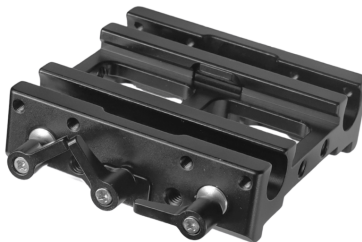

Universal Base Plate



Quick-release plate



Dovetail tripod plate

■ Universal Camera Base Plate Setup

- Loosen the knob on the fluid head and remove the camera base plate.



- Attach the dovetail plate to the camera plate using a screwdriver (Not Included) and tighten securely.



- Attach the assembly to the fluid head.



- Tighten the fluid head knob, then loosen the top release knob on the quick-release plate.



- Remove the quick-release plate from the dovetail.



- Attach the quick-release plate to the camera (Not Included) and tighten it with a screwdriver.



- Mount the camera onto the dovetail plate.



- Tighten the knob to secure it.




- Loosen the side knobs of the universal base plate.



- Insert two 15mm rods (Not Included) into the holes as shown.



- Tighten the corner knobs on both sides to secure the rods.

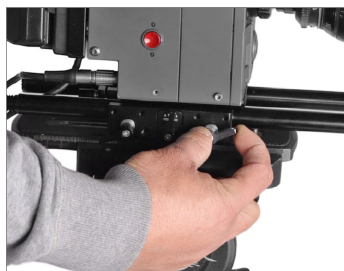

- Loosen the dovetail plate knob.



- Slide the camera in or remove it from the fluid head easily.



Note: The Lower Quick Dovetail Tripod Plate features 1/4"-20 and 3/8"-16 threaded holes, making it compatible with Proaim 15mm Baseplate, 19mm Baseplate, or 19-15mm Baseplate, allowing quick switching between camera setups.

**YOUR PROAIM UNIVERSAL QUICK RELEASE CAMERA BASEPLATE WITH DOVETAIL
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.