

# PROAIM 4' Vega Video Camera Jib Crane for Video makers & Filmmakers (JB-VG04-01)

## Assembly Manual



### What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Vega Jib 4'



Handle



Weight Bar Rod



Flower Knob



Flower Knob (size-M8)



Counter Weight



Bolt with Washer  
Size-1/4x5/8"



2x Allen Key L- Type  
(Size: -1/8"/3/16)



Central



: Converter  
Size-1/4"-3/8"

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## 4' Vega Jib Setup

- Completely stretch and open the section of 4ft Vega Jib, as shown in the image.



- After opening the section, loosen the bottom and side knobs of the Central Fork.
- Loosen the inbuilt grub screw in the central fork with the help of 1/8 Allen key.

**Feature:** Central Fork mechanism facilitates ultra-smooth pan-tilt movements while absorbing unwanted vibrations for cleaner shots.



- After removing the screw, remove the central part so that the mounting of the jib becomes baby pin, then the jib can be mounted on the 5/8 baby pin stand (Not Included).
- Mount the Vega jib section on the Jib Stand (Not Included).



- After mounting the jib, tighten the both knobs while aligning the holes with each other.



- Insert counter weight into jib section.
- Then stabilize the counter weight with the help of the knob.



- Insert the weight rod into the section.
- 4' Vega jib is assembled as shown.



## Handle Assembly

- To detach the handles from one another, loosen them by turning them in circular motion

**Feature:** The Camera Crane can be controlled and moved with the help of a handle.

- Remove the washer from the handle.
- Insert the handle into the hole at the end part section of the Vega Jib, as shown in the image.

- After inserting the handle, attach the handle to the jib from the other side.

- Attach the handle with each other.
- Mount the Quick Release Plate **(Not Included)** on the Camera mounting plate of the Vega Jib.



## Camera Mounting Plate

- After mounting the Quick Release Plate **(Not Included)**, insert the bolts from the bottom side of the Camera mounting plate.



- Insert a 1/4" bolt from the bottom of the extension Camera plate to secure the Quick Release Plate **(Not Included)** and tighten with the Allen key.
- Unlock the lever lock of the quick release plate.



- Slide the Gimbal (Not Included) onto the Quick Release Plate and lock it using the locking lever.



- Now, the Gimbal (Not Included) is completely secured, as shown in the image.



- Insert the weight (Not Included) inside the weight Rod.

**NOTE:** Use the weights according to your camera weight set up requirements.



- Monitor (Not Included) each frame by attaching a monitor to the Jib using the optional Universal Clamp with 13"articulating double arms and 3/8"-16 Threaded Stud.



**YOUR PROAIM 4' VEGA VIDEO CAMERA JIB CRANE  
ALL DRESSED UP AND READY TO GO!**



**(SHOWN WITH OPTIONAL ACCESSORIES)**

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.