

PROAIM

BMP40 R Blimp Microphone Windshield (BMP-40R)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.




40cm Blimp Windshield with Microphone Suspension with Pistol Grip Handle



Modular Windjammer



6 x Mic Holders

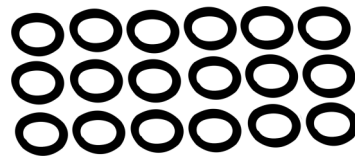

O Ring 18 Pcs




XLR Holder



Boom Pole Adaptor

INDEX

Sr. No	Particulars	Page No.
1.	Key Features	4
2.	Blimp Mic Windshield Setup	4
3	Adjusting the Pistol Grip Handle	4-5
4	Assembling the Mic	5-
5.	Adjusting the Mic Cable	6-7
6.	Detaching Mic Connectors and Handle	7
7.	Boom Pole Adaptor Assembly	8-10
8.	Modular Windjammer Assembly	10
9.	Fully Assembled Overview (Optional Accessories Shown)	11

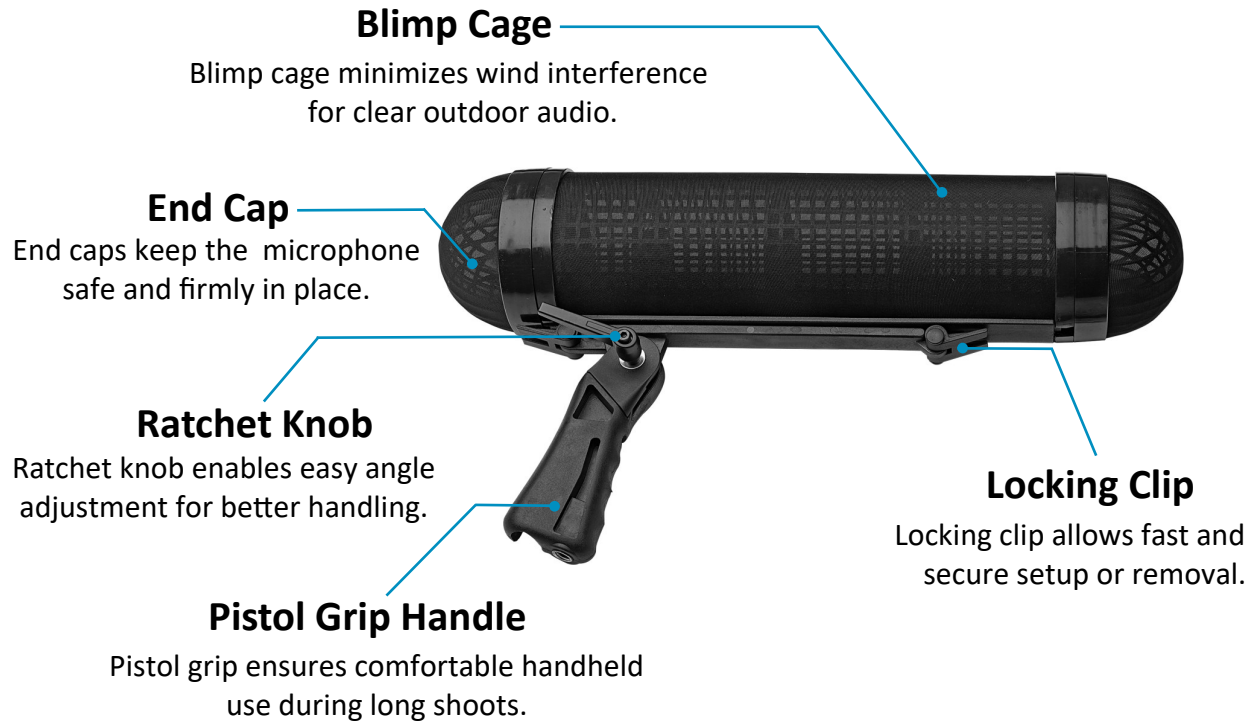

■ Blimp Mic Windshield Setup

- Hold the blimp cage firmly with one hand. With the other hand, gently twist and pull off the end cap, as shown in the image.



Adjusting the Pistol Grip Handle

- Loosen the ratchet knob to adjust the pistol grip handle.



- Pull it down to the desired position, then tighten the knob.



- Open the locking clip on one side of the blimp cage, as shown in the image.



- Repeat the process by opening the locking clip on the opposite side of the blimp cage.



- Slide the mic holder rod out of the blimp cage.



NOTE: The mic holder comes with O Ring and clamps pre-attached. If any O Ring or clamp breaks, you can replace it using the spare parts provided.



Assembling the Mic

- Insert the mic (Not Included) securely into the mic holder.



- Slide the mic holder rod into the cage until it is firmly seated.



Adjusting the Mic Cable

- Pass the mic wire through the center of the locking clips.
- Tighten the locking clips securely.



- Attach the end cap to the blimp cage and tighten it as shown in the image.



- Route the internal XLR cable through the pistol grip handle for neat cable management.



Note: This ergonomic handle is designed for comfortable handheld operation.



- The handle features a 3/8"-16 threaded base for mounting a boom pole.
- Attach the boom pole (**Not Included**) to the pistol grip handle.



- Connect the mic's XLR connector to the boom pole's XLR connector.



- The microphone's XLR connector is properly connected to the boom pole's XLR connector.



Detaching Mic Connectors and Handle

- Disconnect the boom pole's XLR connectors from the mic's XLR connectors.



- Detach the boom pole from the pistol grip handle as shown in the image.
- Pull out the mic wire from the pistol grip handle.



- Loosen the ratchet knob and remove it.



- Take off the handle locking plate from the pistol grip.



- Finally, detach the handle from the blimp cage, as shown in the image.



Boom Pole Adaptor Assembly

Feature: This is a shorter attachment with the same 3/8"-16 thread.

- It's used to mount the blimp cage directly to a boom pole without the long pistol grip.
- It reduces total length and weight — ideal for extended boom use.



- Insert the screw into the boom pole adaptor as shown in the image.



- Now, attach the spring to the installed screw.



- Insert the screw with spring into the threaded hole of the boom pole adaptor .



- Attach the handle locking plate to the opposite side of the boom pole adaptor .



- Place the washer onto the boom pole adaptor, as shown in the image.



- Secure the ratchet knob onto the boom pole adaptor and tighten properly.



Features: The boom pole adaptor supports two mounting sizes : 3/8" and 5/8".

- The boom pole adaptor is pre-configured with a 3/8" mounting.
- To switch to the 5/8" mounting, simply remove the grub screw with using a screwdriver.



- Once the grub screw is removed, the adapter converts to the 5/8 size.



- Attach the XLR holder to the boom pole adaptor.



- Attach the boom pole to the XLR holder.
Note: Here we use the 3/8" mounting to attach the boom pole.



- Connect the mic's XLR connector to the boom pole XLR connector.



- Secure the XLR connectors inside the XLR holder.



Modular Windjammer Assembly

- Loosen the lock of the modular windjammer and open it.



- Insert the boom pole inside the windjammer.



- Close and lock the windjammer.
- Your setup is ready for use.



**YOUR PROAIM BMP40R BLIMP MIC WINDSHIELD
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.