

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

INDEX

Sr. No	Particulars	Page No.
1	Cinema Pro Stabilization Arm Setup	3
2	Spring Core Swapping	3-4
3	Arm Post Swapping	4-5
4	Socket Swapping	5-6
5	Tension Adjustment	6-7
6	Cinema Arm Mounting	7
7	Stabilizer Mounting	8
8	Final Setup	8

Cinema Pro Stabilization Arm Setup

Spring Core Swapping

- Loosen the bolt of the spring bracket using the 10mm spanner and remove it.



- Now, carefully remove the Spring bracket from the Spring core's top and remove the Spring core.



- Follow the same process to remove the second Spring Core.



- Insert the Orange Spring core into the Cinema Arm, as shown in the video.

Feature: The quick Swap Spring is designed to minimize downtime by allowing for quick and easy spring changes.



- Insert the Spring bracket into the Spring core's top.



- Then, insert the Spring bracket into the Spring core's bottom.
- Tighten its bolt using the 10mm spanner.



- The orange spring core is securely attached to the Cinema Arm.
- Repeat the same process to attach the other Spring cores.

Feature: The Proaim Cinema Pro Arm is equipped with three swappable spring cores tailored for different load capacities, ranging from 15-29kg / 33-63.8lb



Easy Swap Spring Cores

Quickly Change Spring Cores to Accommodate Different Setups



20 Kg-25 Kg / 44 lb-55 lb



15 Kg-22 Kg / 33 lb-48.5 lb



25 Kg-29 Kg / 55 lb-63.8 lb

Arm Post Swapping

- Loosen the bolt and remove the cap using the 5mm Allen key.



- Then, carefully remove the 5/8" Arm Post.



- Now, securely insert the 1/2" Arm Post.

Feature: With three types of arm posts (1/2", 3/4", 5/8"), our combo offers comprehensive mounting options compatible with various steady cam stabilizers and rigs, including Zest and Equator.



- Insert the cap into the arm post.

Feature: You can attach it to poles or a rickshaw using a hard mount for added flexibility.



Compatible with Most Stabilizers & Gimbals

1/2", 3/4", 5/8" Arm Mounting Post



Socket Swapping

- Loosen the Socket knob.
- Then remove the Socket and flower knob.




- Now, attach the Socket to the Socket block and carefully insert the knob.





- The Socket is securely attached to the socket block.

Feature: The two mild steel mounting socket blocks allow you to choose between zero friction and friction settings for precise control over arm movement.

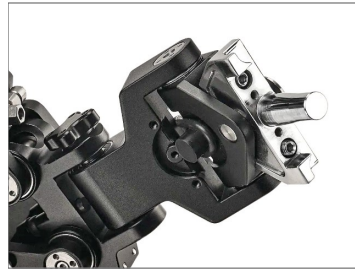

Choose b/w Friction & Zero Friction Settings Two Mild Steel Socket Blocks

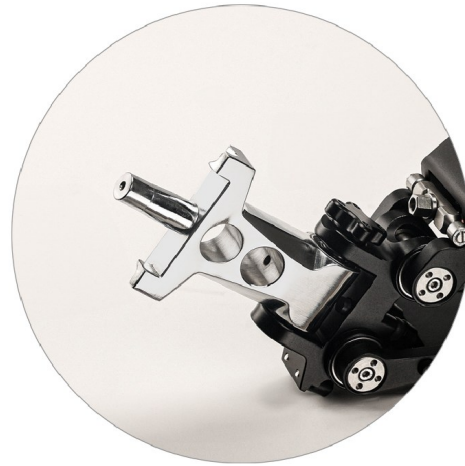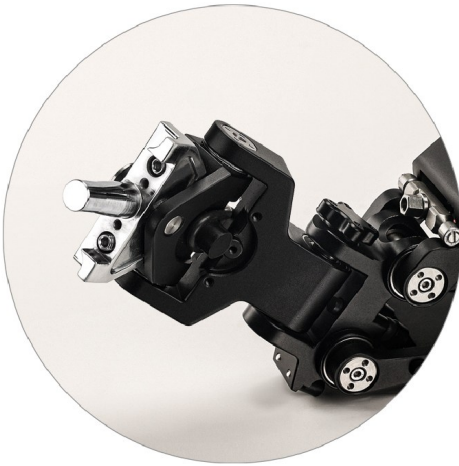

Tension Adjustment

- Loosen the QR bolt of the Socket Bracket using the 5mm Allen Key.
- Then, adjust the spring tension as per your requirement.

Feature: QR Bolts on each end ensure a quick Spring Tension Adjustment.



Quick and Easy Spring Tension Adjustment



Cinema Arm Mounting


- Loosen both knobs of the Socket Block.



- Then, insert the male connecting Socket of the Arm into the Socket Block of the Vest (Not Included).



- After inserting the Arm, tightening both the knobs of the Socket Block.
- The Arm is securely attached to the vest.

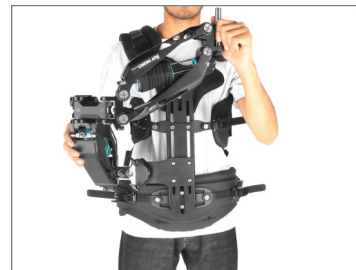

Stabilizer Mounting

- Now, mount the Stabilizer (**Not Included**) on the Arm post.

NOTE: When attaching the Stabilizer to the Arm and vest, keep the Stabilizer's handle straight by the Arm's pin.



- Your setup is ready to use.



**YOUR PROAIM CINEMA PRO STABILIZATION
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty for our products from the date of purchase. Within this period, we will repair it without charge for labor or parts. The warranty doesn't cover transportation costs, nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subject to inspection and evaluation by us.

Liability: We are not liable for damage caused by products we do not supply or from mishandling in transit, accident, misuse, neglect, or lack of care of the product or service by anyone other than our company.

Contact Us: If you are dissatisfied, please contact us immediately. We promise our utmost support and care until you use our product.