

Flying Bowl Slider (SL-FLKB)


Assembly Manual



Available Sizes: 2ft, 3ft and 4ft

What’s In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

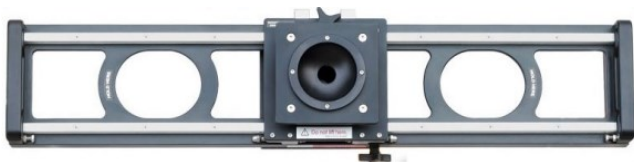

Flying Precision Camera Slider



Flight Case



Crossbar



Feet



75mm Conversion Ring



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ Flying Slider on Bowl Stand - Setup

- Remove bolt from Hub Locking Knob, and insert into the bottom of slider by twisting it.



- Mount the Slider on 100mm Tripod Stand (**Not Included**) and tighten Hub Locking Knob to secure it on stand.



- Loosen the knob to move top platform and tighten it to lock the top platform when you need static shots or while transportation.



- For 360° Rotation of Slider, loosen the black knob as shown in image.



- Now affix your Bowl Mount Fluid Head (**Not Included**) on Slider for mounting camera setup, and secure it properly.



YOUR PROAIM FLYKING BOWL CAMERA SLIDER ALL DRESSED UP AND READY TO GO!



■ Flying Slider on Two Tripod Stand - Setup

NOTE: Mount the Slider on any stand with 3/8"-16 thread.

- Attach Quick Release Plate of Tripod Head with 3/8"-16 thread, onto the end foots of Slider.
- Now mount the Slider on Tripod Head and lock it properly to ensure a secure connection.



QUICK TRIPOD ATTACHMENT SAVES PRODUCTION TIME



■ Flying Slider on C-Stand - Setup

- Insert the C-stands (Not Included) into the crossbars attached to both ends of the slider.



- Now slider is properly mounted on C stands.

Note: Compatible with 5/8" baby pin c-stands when supported by a heavy-duty tripod.



■ End Feet Setup

- Attach each of the two Cross Bars on each side of Slider and tighten them accurately with allen key.



- Insert the four End Feet on all the corners of Crossbars and tighten knob to secure them.



- Loosen red knob at End Feet to adjust the height, according to your setup requirement.



QUICK ATTACHMENT SAVES PRODUCTION TIME



YOUR PROAIM FLYKING BOWL CAMERA SLIDER ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.