

PROAIM

Rocker Camera Plate System (P-RCPL-01)




All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

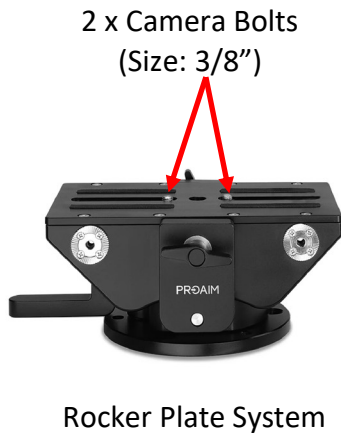

Handle



3 x Allen Bolts
Size: 6 x 12mm



Euro Adapter



1 x Allen Key
Size: 5mm

Rocker Camera Plate System Setup

Handle Assembly

- Insert the handle into the Rocker Plate System and tighten the Rosette Knob to secure it.



Feature: The rosette knob allows you to attach the handle on either the left or right side, based on your preference.



- To adjust the handle position, loosen the rosette knob, reposition the handle as desired, then tighten the knob securely.



- Loosen the handle knob to extend or retract the handle length, then tighten firmly for comfortable control.

Feature: The handle's length can be easily adjusted using convenient knobs, ensuring both control and comfort when capturing your best shots.



■ Marcus Dolly Setup

- Mount the Rocker Plate System onto the Marcus Dolly (**Not Included**).




Wide Gear Compatibility



- CD = 117mm; Threaded holes, M10
- CD = 110mm; Clearance holes, \varnothing 10mm
- CD = 41.5mm; Threaded holes, M6
- CD = 41.5mm; Threaded holes, M5



- Insert bolts from underneath and securely tighten using a 3/16" T-Type Allen Key (Not Included).

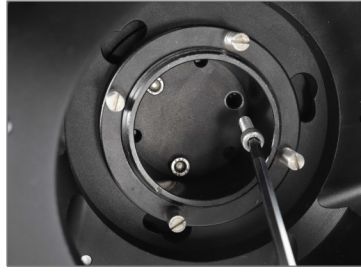

- Mount the quick-release camera baseplate (Not Included) onto the Rocker Plate System and fasten using the camera bolt.



- To remove or reposition the baseplate, unlock the baseplate locking lever and adjust.

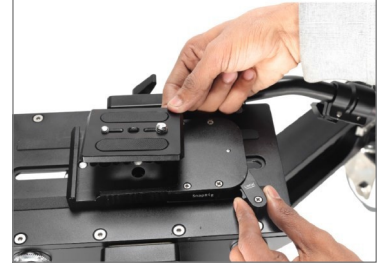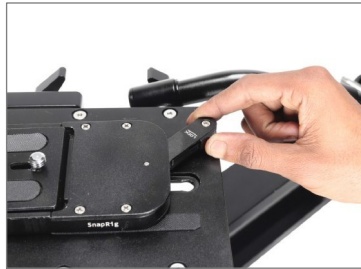

■ Euro Mounting Setup

- Place the Euro Mount Adapter onto the Rocker Plate.



- Insert and tighten the Allen bolt with the 5mm Allen key to secure the adapter.



- The Euro Mount Adapter is now firmly attached to the Rocker Plate.
- Next, loosen the Ratchet Knob to attach the Rocker Plate to the Euro Mount.



- Mount the Rocker Plate onto the Euro Mount.



- Tighten the ratchet knob to secure the setup.



■ Camera Mounting Setup

- Attach the camera plate to your camera (Not Included) and tighten bolts using a screwdriver (Not Included).



- Mount the camera onto the Rocker Plate System.



- Your camera is now securely mounted on the Rocker Plate System and ready to use with the dolly.



YOUR PROAIM ROCKER CAMERA PLATE SYSTEM ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does **not** cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.