

# PROAIM

## Soundchief Channel Cart (CT-SDCF-CV4)



---

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

# What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Channel Frame



Bottom Shelf




Top Shelf




Sliding Shelf



2 x 16" Wheels

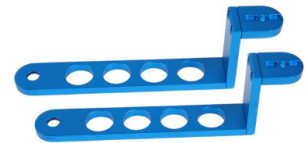

Wheel Bracket

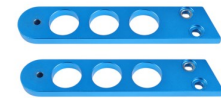

Bracket for Caster wheel



2 x Caster Wheels



Handle Rod



Corner Plate with 4 CSK Bolts(8x16mm)



Tablet Holder with 2 x Button heads (8x16mm)



Rack Mount



Rack Mount Bracket With bolts



Head Phone Holder



Big Caster Wheel Shafts with Bush



Small Caster Wheel Shafts with Bush



1 x Boom Pole Holder Kit




2 x Antenna Holders



8 x knobs with Washers



Cup Holder

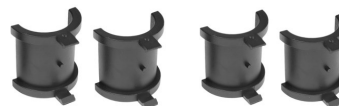


4 x Bushes



2 x Safety Hooks



5 x T-Nut (1/4")

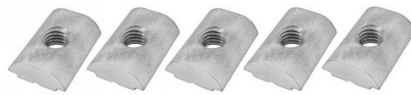

5 x T-Nut (6mm)



5 x T-Nut (8mm)

20 x Cage Nuts  
(6x16mm)3 x T-Type Allen Keys  
(4mm,5mm,5/16")2 x L-Type Allen Keys  
(4mm,5mm)2 x Button Heads  
(8 x 20mm)2 x Button Heads  
(8 x 16mm)

Wrench (10-11)

## INDEX

Sr. No	Particulars	Page No.
1	Bottom Shelf Assembly	4
2	Corner Plate Assembly	4-5
3	Wheel Bracket Assembly	5
4	2 x 16" Wheels Assembly	6
5	Sliding Shelf Assembly	7
6	Bottom Shelf Assembly	8
7	Rack Mount Bracket Assembly	8-9
8	Caster Wheels Mounting	9
9	Boom Pole Cup Holder Mounting	10
10	Boom Pole Holder Mounting	10
11	Safety Hook Mounting	10
12	Head Phone Holder Mounting	10
13	Tablet Holder Mounting	11
14	Antenna Holder Mounting	11-12
15	Final Setup	12


## Soundchief Channel Cart Setup

### Bottom Shelf Assembly

- Insert the knob into the Soundchief channel frame.
- Then, attach the bottom shelf to the Soundchief channel frame.



- Now, tighten the knob securely.

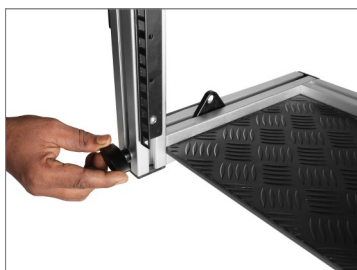

- Repeat the same process to attach the bottom shelf to the other channel frame.
- The bottom shelf is now properly attached.



### Corner Plate Assembly

- Attach the corner plate to the cart and insert the CSK bolt (8 x 16mm).




- Tighten the CSK bolt using a 5mm Allen key.
- Repeat the same process to attach the other corner plate.



- Loosen the bolt using a 5mm Allen key and remove it.



- Now, slide the plate forward and insert the bolt.

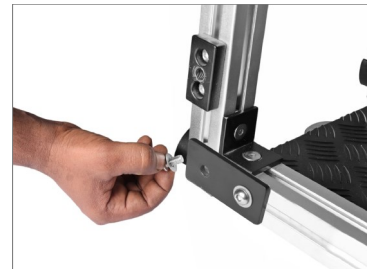


- Then, tighten the bolt again using a 5mm Allen key.
- Repeat the same process on the other side.




## Wheel Bracket Assembly

- Loosen the bolt using a 5mm Allen key and remove it.
- Then, attach the wheel bracket to the cart.

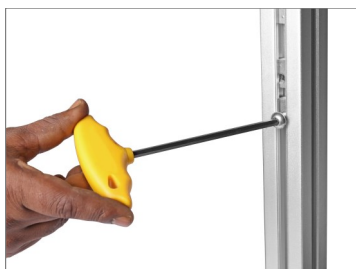

- Now, insert the bolt by aligning the holes and tighten it using a 5mm Allen key.

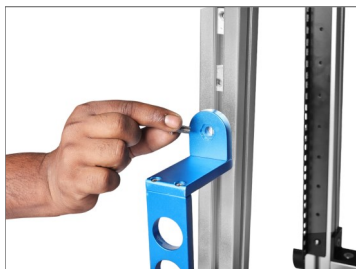


- The wheel bracket is now securely attached to the cart.
- Repeat the same process to attach the other wheel bracket.



## 2 x 16" Wheels Assembly

- Remove both bushes from the caster wheel shaft.

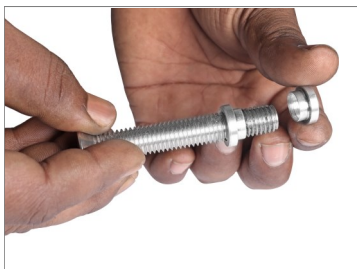

- Now, insert the bushes into the wheel on both sides.



- Now, attach the wheel to the cart and insert the bolt by aligning the holes.



- Then, tighten the bolt using a 5x16mm Allen key.
- The wheel is now properly attached.




- Repeat the same process to attach the other wheel.




## Sliding Shelf Assembly

- Now, attach the sliding plate to the cart and insert the knob by aligning the holes.

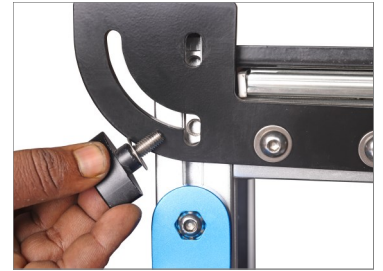

- Then, insert the other knob. Repeat the same process on the other side.
- The sliding shelf is now properly attached to the cart.

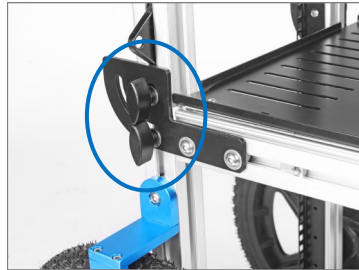

## Push and Pull Sliding Mechanism



## Bottom Shelf Assembly

- Now, attach the bracket to the cart and insert the bolts.



- Then, tighten both bolts using a 5mm Allen key.
- Follow the same process to attach the other plate.




## Rack Mount Bracket Assembly


- Remove both bolts, nut bolts, and washers from the rack mount using a 10mm spanner.




- Now, attach the bracket to the rack adapter and insert the bolt into the hole.

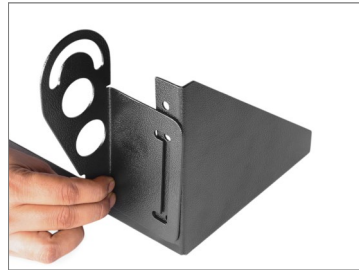


- Now, insert the washer and nut bolt on the opposite side.
- Then, tighten the bolt and nut bolt using a 10mm spanner and a 5mm Allen key.

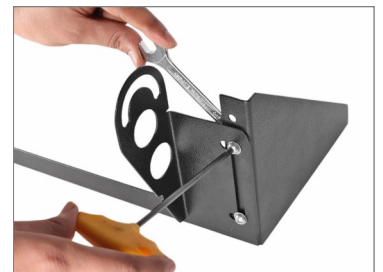

- Follow the same process to attach the rack mounting bracket to the other holder.

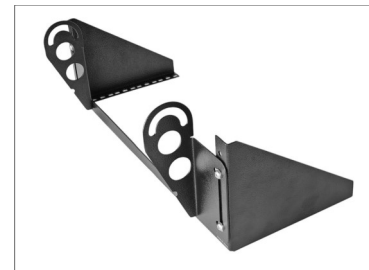


- Now, attach the rack mount to the bracket and insert the handle rod.

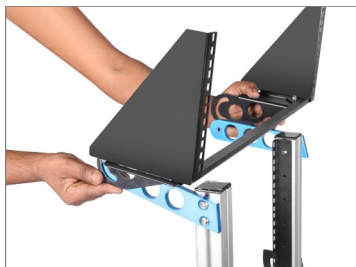


## Caster Wheels Mounting


- Remove one bush from the small caster wheel shaft and insert the bolt into the wheel.

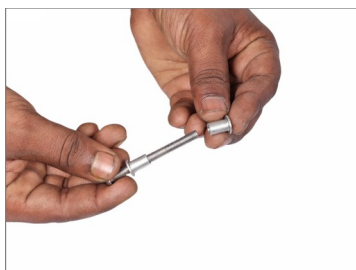

- Then, insert the bush into the other side of the wheel.
- Now, insert the wheel into the rack mount bracket by aligning the holes of the wheel bracket and the handle rod.

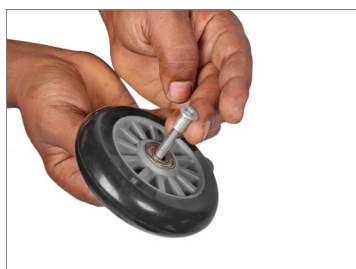

- Then, tighten the wheel shaft using a 5mm Allen key and secure the wheel properly.
- Follow the same process to attach the other wheel.

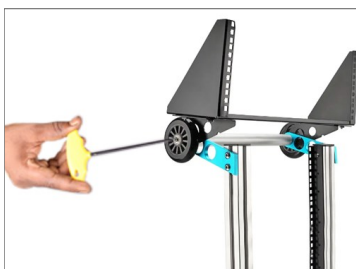

- The rack adapter kit is now properly attached.



## Boom Pole Cup Holder Mounting

- Now, attach the boom pole cup holder to the cart and tighten the bolt using a 5mm Allen key.




- Then, insert the cup into the boom pole cup holder.



## Boom Pole Holder Mounting

- Now, attach the boom pole holder to the cart and tighten the bolt using a 5mm Allen key.

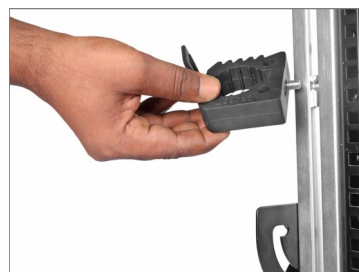



## Safety Hook Mounting

- Now, attach the safety hooks to the cart.




## Head Phone Holder Mounting

- Now, attach the headphone holder to the cart and tighten the bolt using a 5mm Allen key.

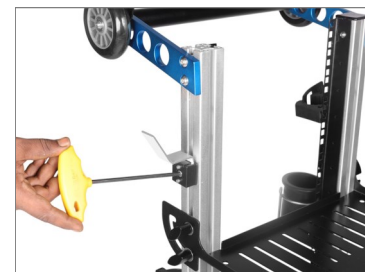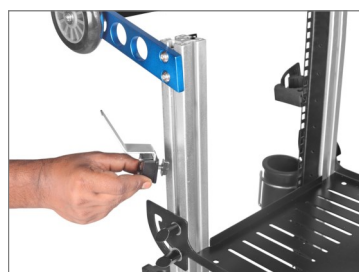

## Tablet Holder Mounting

- Attach the tablet holder to the cart and tighten the button head (8x16mm) using a 5mm Allen key.

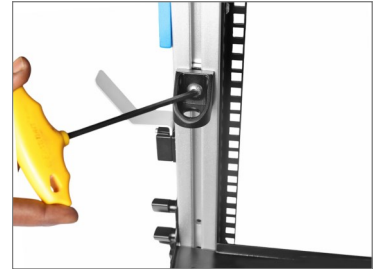

- Repeat the same process to attach the other tablet holder.



## Antenna Holder Mounting

- Open the antenna holder and remove the bush from it.




- Now, attach the antenna holder to the cart and tighten the bolt using a 5mm Allen key.



- Then, insert the bush back into the antenna holder. Close the clamp and tighten it.



- Follow the same process to attach the other holder.
- Your cart is now ready to use.

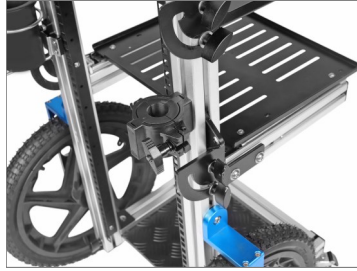

## YOUR PROAIM SOUNDCHIEF CHANNEL CART ALL DRESSED UP AND READY TO GO!



**(SHOWN WITH OPTIONAL ACCESSORIES)**

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.