

PROAIM

Gold Pan Tilt Head for Camera Jib Crane (PT-Gold)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Gold Pan Tilt Head



12V DC Motor



12V Joystick Controller



12V AC Adapter



Universal Adapter



3 mtr Power Cable



15 mtr Control Cable



2 x Fuse



MS Check nut
(Size: -1/4)



4 x Wings Nuts



1 x L-Type Allen key
(Size: -1.5mm)



2x L-Type Allen key
(Size: - 3mm,3/16")



Bag Packing

INDEX

Sr. No	Particulars	Page No.
1	Tilt Motor Installation	4
2	Attaching the Tilt Motor	4
3	Mounting the Pan-Tilt Head on the Jib	4-5
4	Mounting the Camera	5
5	Balancing the Camera	6
5	Motor Attachment After Balancing	7
7	Attaching the Tilt Motor to gear	7
8	Attaching the Pan Motor to gear	7
9	Pan Motor Replacement	8
10	Removing the Pan Motor	8
11	Attaching the Pan Motor	9
12	Final Setup	10

Tilt Motor Installation

Attaching the Tilt Motor

Note: Always mount motors before connecting to the gear to ensure proper balance.

- Mount the motor onto the Tilt Head.




- Insert and tighten all four Allen bolts with a 3mm Allen key.



- connect the Lemo connector.



- The Tilt Head motor is now properly Installed and ready for use.


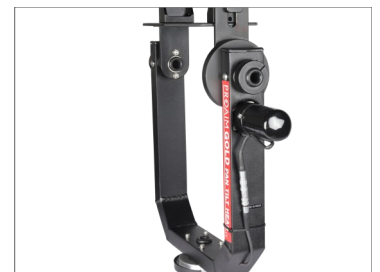


Mounting the Pan-Tilt Head on the Jib


- Securely mount the Gold Pan Tilt Head onto the jib (**Not Included**).



- Insert the bolts into the mounting holes.

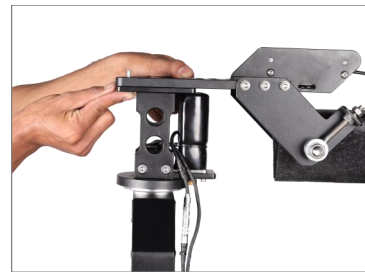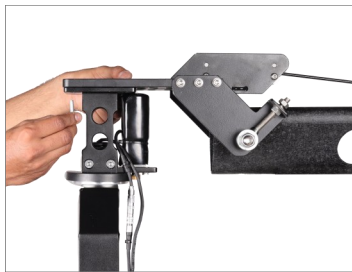

- Place the washers and fasten the wing nuts tightly to secure the assembly.

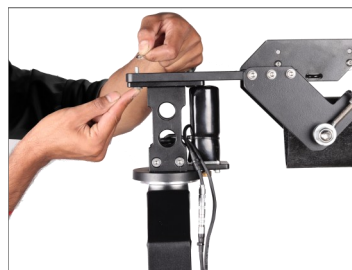

- The pan-tilt head is now securely attached to the jib.



■ Mounting the Camera

- Place your camera (**Not Included**) on the Tilt Head Plate
- Insert the Check nut into the Tilt plate.



- Tighten the Check Nut fully against the bottom of the camera plate to secure the camera.

Note: Before balancing, the head motor must be detached. If not, the camera will be attached but not properly balanced.



Balancing the Camera

- Loosen the nut and slide the camera to achieve proper balance.




- Balance the camera and then tighten the check nut.



- Loosen the Allen bolts of sliding Balancing arm using the 3/16" Allen key.



- Adjust the camera plate according to your requirement.
- Tighten the Allen bolt.

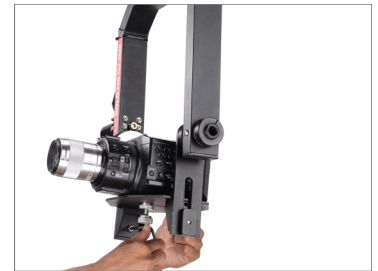

- The camera is now balanced and can be positioned in any orientation as needed.



■ Motor Attachment After Balancing



Attaching the Tilt Motor to gear

- Loosen the Allen bolt of motor using a 3mm Allen key, then attach the motor to gear.
- Tighten the Allen bolt of motor securely with a 3mm Allen key.
- The tilt motor is now attached and ready for use.



Attaching the Pan Motor to gear

- Loosen the Allen bolt of pan motor using a 3mm Allen key.
- Attach the motor to the gear.
- Tighten the Allen bolt securely using the 3mm Allen key.

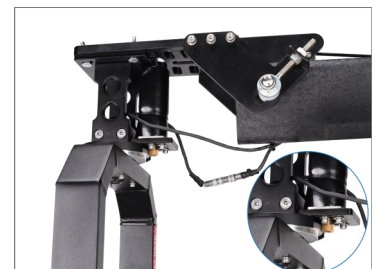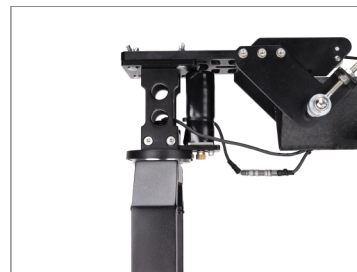

- The Gold Pan-tilt Head setup is now complete and ready for use.



■ Pan Motor Replacement

Removing the Pan Motor

- Disconnect the Lemo connector.
(**Note:** In case you need to replace your motor, follow these steps)



- Use a 3mm Allen key to remove the Allen bolts.



- Unscrew all remaining bolts securing the motor to the Pan Head.



- Gently separate the motor from the Pan Head.




Attaching the Pan Motor

- Connect the Lemo connector.



- Position the motor onto the Pan Head.

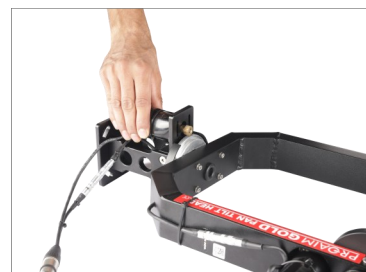

- Insert the Allen bolts and tighten them firmly using a 3mm Allen key.



- The Pan Head motor is now properly installed and ready for use.



**YOUR PROAIM GOLD PAN TILT HEAD FOR CAMERA JIB CRANE
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please contact us immediately and we promise our utmost support and care until you use our product.