

PR[→]AIM

Soundchief Cart | Vertical Workstation (CT-SDCF-01)



All rights reserved.


No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Top Shelf

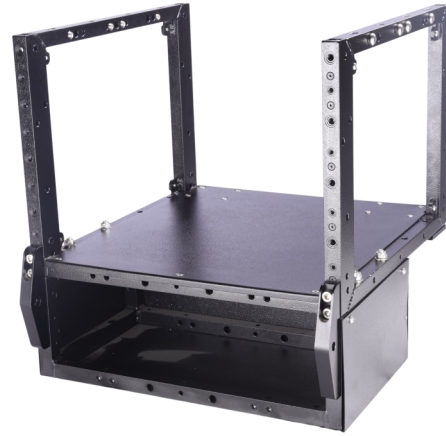

Bottom Shelf




20" Pneumatic Wheels



9" Dovetail Wheels



4 x Speed Rail Clamps

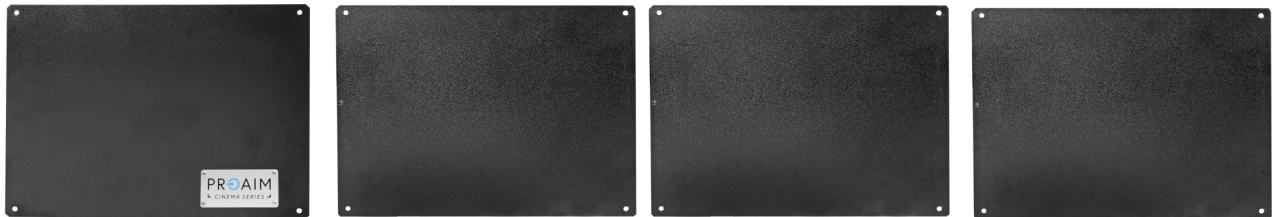


4 x Side Plates



2 X Side Wings



2 x Handles

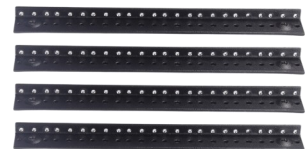

4 x Rack Mount Plate



2 x Speed Rails



Handle



Center Support plate



2 x Side Wing Support Bracket



2 x Wheel Shaft



Crossbar with knob



4 x Knobs & washers



6 x Knobs & Washers



5 x Button Head Screw
(Size: 8 x 16mm)



3 x Spanners
(10mm,17mm,19mm)



3 x T-Type Allen Keys
(4mm,6mm,5/16")



1 x L-Type Allen Key
(4mm)

INDEX

Sr. No	Particulars	Page No.
1	Soundchief Cart Setup	5
2	Side Plate Assembly	5
3	Handle Mounting	5-6
4	Center Support Plate Mounting	6
5	9" Dovetail Wheels Assembly	6-7
6	20" Pneumatic Wheels Assembly	7
7	Top Shelf Assembly	8
8	Side Wing Support Bracket	8
9	Top Rack Mount Plate Assembly	9
10	Side Wings Assembly	9-10
11	Speed Rail Clamps & Crossbar Assembly	10-11
12	Collapsible Side Wings	11
13	Top Shelf Rotation (Toward Dovetail Wheels)	12
14	Handle Assembly	12
15	Final Setup	13

Soundchief Cart Setup

Side Plate Assembly


- Loosen bolts using the 4mm Allen key.



- Remove all the bolts.



- Attach the side plate to the bottom shelf and reinsert the bolts.

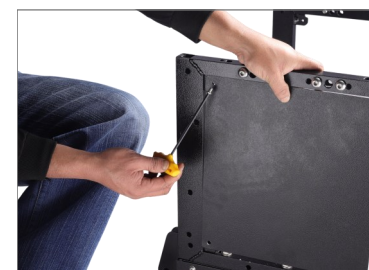

- Retighten all the bolts securely using the 4mm Allen key.
- The side plate is now securely attached to the Bottom shelf.
- Follow the same steps to attach the plate on the other side.




Handle Mounting


- Loosen and remove the bolt from the bottom shelf using the 4mm Allen key.



- Attach the handle to the bottom shelf .
- Insert the bolt and retighten it using the 4mm Allen Key.

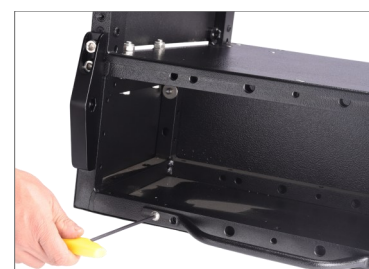


- The handle is now securely attached to the bottom shelf.

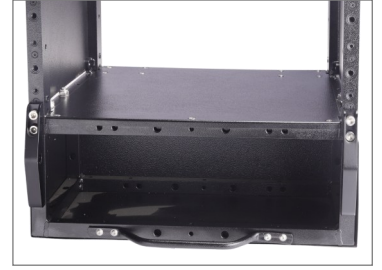

Center Support Plate Mounting

- Attach center support plate to the bottom shelf.
- Insert the bolts, ensuring the threads align properly.
- Tighten the bolts using the 6mm Allen key.
- Repeat the same steps to install the second center support plate.

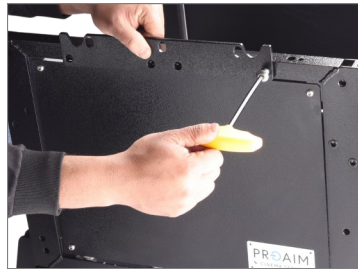

9" Dovetail Wheels Assembly

- Unlock the 9" dovetail wheel lever and slide the wheel onto the cart's bottom base.
 - Securely tighten it using the lever.
- Feature:** The push and pull wheel brake system enables you to securely halt the movement of the wheels.



- Repeat the same steps to attach the other 9" dovetail wheel.




20" Pneumatic Wheels Assembly

- Remove the nut, bolt, and bush from the wheel shaft.



- Insert the wheel shaft into the bottom shelf and insert the bush from the other end.

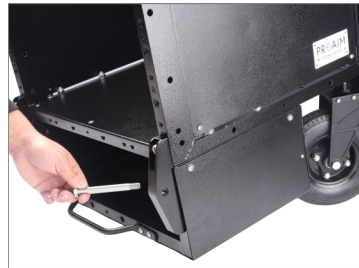

- Mount the 20" wheel and insert the nut bolt, as shown in the image.



- Tighten the bolt securely using the 19mm spanner.
- Repeat the same process for the second 20" Pneumatic wheel.




Top Shelf Assembly

- Position the top shelf onto the bottom shelf, ensuring a proper fit.
- Insert the shelf knobs from both sides and tighten them securely.




- Tighten all three knobs.


Feature: The top shelf can be mounted onto the bottom shelf from either side.

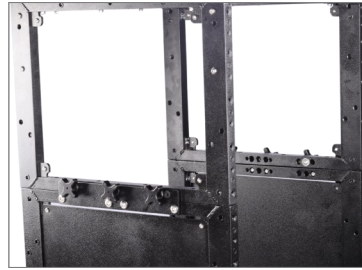

- Attach the side plate to the top shelf.
- Insert all the bolts and tighten them using 4mm Allen key

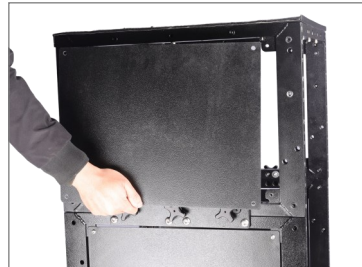


- The side plate is now securely attached to the top shelf.
- Repeat the same steps to attach the side plate on the opposite side.

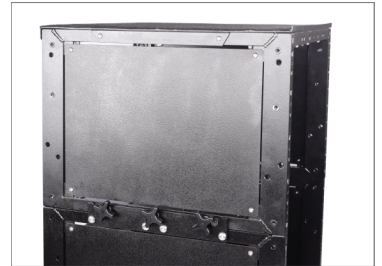

Side Wing Support Bracket

- Position the side wing support bracket onto the top shelf and insert the bolts.


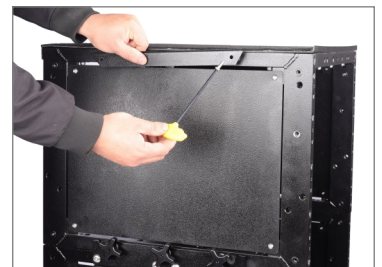


- Tighten the bolts using a 4mm Allen key.
- Repeat the same process to attach the other Side Wing Support Bracket.




Top Rack Mount Plate Assembly

- Attach the rack mount plate to the card bottom Shelf. then install the bolt.

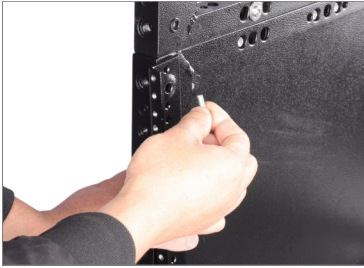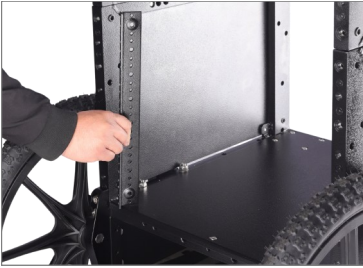

- Tighten the bolts using a 4 mm Allen key.

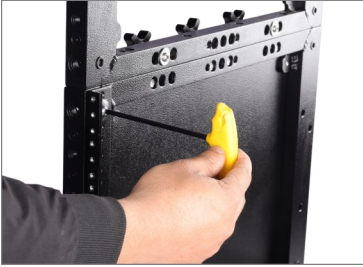

- Follow the same steps for the Top rack mount plate.



Side Wings Assembly


- Loosen and remove the bolt from the top shelf using the 4mm Allen key.



- Carefully open the sliding bar of the side wing.



- Attach the side wing to the top shelf and reinsert the bolts.

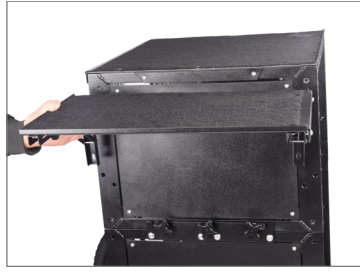

- Tighten all bolts securely using the 4mm Allen key.
- Repeat the same steps to attach the other side wing.



Speed Rail Clamps & Crossbar Assembly

- Loosen the knob on the speed rail clamp and remove the knob and washer.



- Slide the speed rail clamp onto the crossbar and insert the knob and washer.

Note: Ensure that you slide the speed rail clamp from the flat side.



- Tighten the knob to secure the clamp.



- Repeat the same steps to attach the speed rail clamp to the other end of the crossbar.



- Attach the crossbar to the cart, ensuring the threads align, then tighten both end knobs to secure it.


Note: Attach the curved side of the speed rail Clamp to the cart; otherwise, the folding shelves will not fold properly.



Note: The Cart features two vertical poles at the back for holding a crossbar to mount multiple monitors.



- Attach the single speed rail clamp to the cart, ensuring the threads align, then insert the speed rail knob and tighten securely.
- Repeat the same process to attach the second clamp.

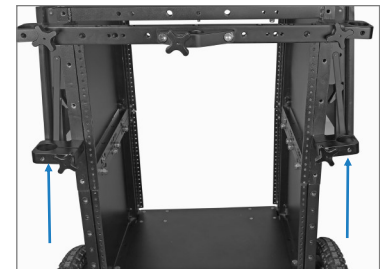

Collapsible Side Wings

- Extend the collapsible side wings by pulling them upward.



- After opening the shelf, lock it in place to secure the wings.




Top Shelf Rotation (Toward Dovetail Wheels)

- Loosen and remove all shelf knobs from one side of the shelf.
- Repeat the same steps to remove the knobs from the opposite side.



- Rotate the top shelf and mount it onto the bottom shelf.

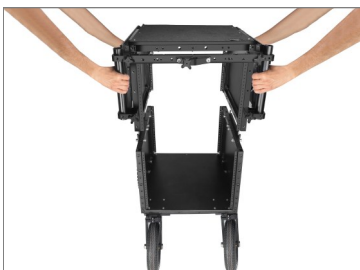

- Reinsert all shelf knobs and tighten them securely to lock the shelf in place.



Handle Assembly


- Twist the handle to the left to loosen it and open the speed rail clamp.



- Attach the handle to the speed rail using the speed rail clamp.
- Twist the handle to the right to tighten it securely.



- Repeat the same process to attach the second handle.

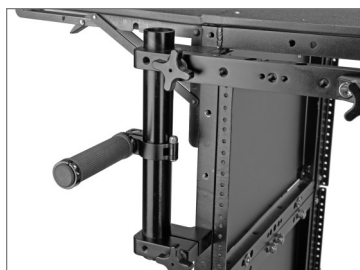

Note: You can adjust the handle position according to your requirement.

**YOUR PROAIM SOUNDCHIEF CART VERTICAL WORKSTATION
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty for our products from the date of purchase. Within this period, we will repair it without charge for labor or parts. The warranty doesn't cover transportation costs, nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subject to inspection and evaluation by us.

Liability: We are not liable for damage caused by products we do not supply or from mishandling in transit, accident, misuse, neglect, or lack of care of the product or service by anyone other than our company.

Contact Us: If you are dissatisfied, please contact us immediately. We promise our utmost support and care until you use our product.