

PR[→]AIM

MoveMate Motorised Cart Upgrade Kit (CT-MVMT-UK)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Controller Box



2 x Motorized Wheels



Disc Brake Handle with Wire



AC Input/ Charging Cable



Spanner
Size: - 21mm



Cable Ties



Remote Controller



Wire
Clip Organizer



2 x Allen Bolts
Size: - 1/4



Remote Cable



Universal Adapter



1 x T-Type Allen
Key 2.5mm



1 x T-Type Allen
Key 3mm



1 x T-Type Allen
Key 4mm



1 x T-Type Allen
Key 3/16 mm



1 x L-Type Allen
Key 4mm


INDEX

Sr. No	Particulars	Page No.
1	MoveMate Motorised Cart Setup	4
2	Brake Assembly	4
3	Attach Disc Brake to Motorized Wheels	4-5
4	Attach the Motorized Wheels	5
5	Install Brake Handle	6-7
6	Install Remote Controller	7-8
7	Install the Battery	8
8	Plug in the Charging Cable	9
9	External Battery	9
10	Final Setup	10

MoveMate Motorized Cart Setup

Brake Assembly

- Remove the lock from the brake.

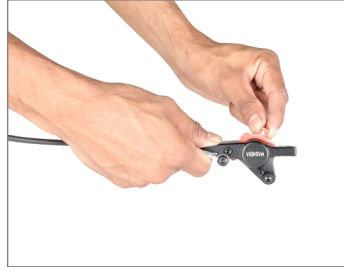

- Remove the 1/4 Allen bolt from the wheel fork using a 4mm Allen key.



Attach Disc Brake to Motorized Wheels

- Attach the disc brake handle to the motorized wheel.



- Insert the 1/4 Allen bolt into the wheel and tighten using a 4mm T-Type Allen key.




- Open the lever of the pre-attached front cart wheel.
- Lift the cart (**Not Included**) slightly and slide the wheel out.



- Position the controller box beneath the cart and slide it inward.



- Tighten the bolts on the controller box using a 3/16 mm T-Type Allen key to secure it to the cart.

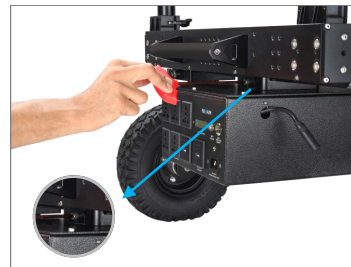

Attach the Motorized Wheels


- Slide the motorized wheel into the cart's frame, aligning it with the attachment point.
- Tighten the lever on the motorized wheel to lock it in place.
- Attach the second motorized wheel to the other side of the cart using the same process.



- Connect the wire from each motorized wheel to the corresponding port on the controller box.



- Insert the extra wheel wire into the controller box.

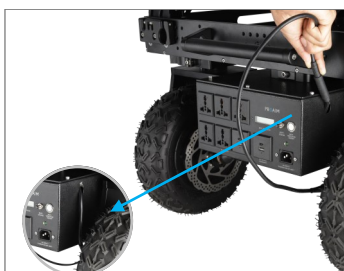


Install Brake Handle


- Connect the wires from both wheels to the controller box.
- Insert the bolt and tighten it using a 3/16mm T-Type Allen key.




- Refer to the image for guidance.

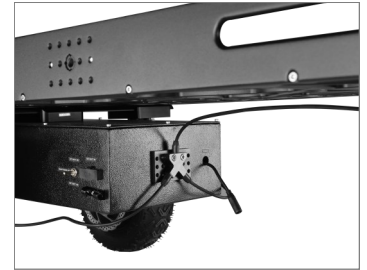

- Secure the disc brake handle wire to the cart using Wire Clip Organizer, as shown in the image.

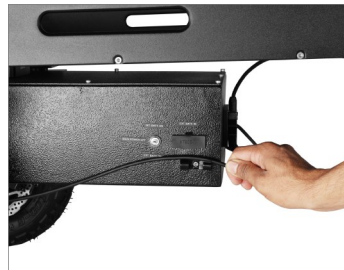

- Use cable ties to fasten the brake handle wire neatly along the cart frame.
- (You can attach the wire clip organizer anywhere on the cart frame as needed, depending on the wire layout.)

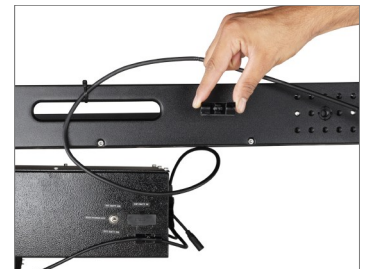



- Attach the brake handle wire to the Wire Clip Organizer, as shown in the image.



- Fix the wire neatly along the cart frame to ensure a clean and safe setup.
- Rotate the brake handle 360° to open it.



- Position the brake handle on the cart and rotate it 360° again to close it.

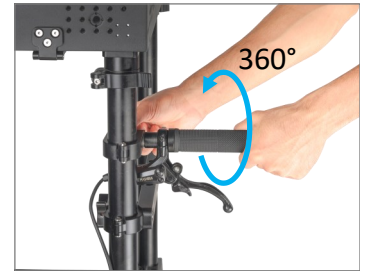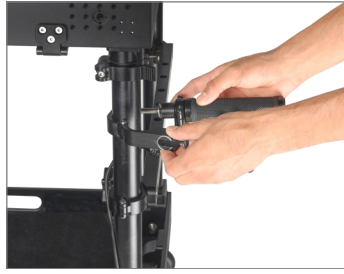

- Tighten the brake handle bolt using a 4mm L-Type Allen key.
- The disc brake handle is now securely fixed on the cart.



Install Remote Controller

- Plug one end of the remote cable into the controller box.



- Route the cable along the cart frame and secure it with cable ties.
- Attach the wire clip organizer to the cart using double-sided tape.



- Insert the remote cable into the wire clip organizer to hold it in place.
- Plug the other end of the remote cable into the remote controller.



- Attach the remote controller to the cart using the same process as the brake handle.



- Use a 4mm L-type Allen key to tighten the remote controller bolt.
- Both handles are now securely attached to the cart.



Install the Battery


- Using a 3mm T-Type Allen key, loosen and remove all bolts securing the controller box lid.



- Carefully lift and open the controller box lid.



- Unlock the key from the battery, **(Not Included)** as shown in the image.
- Slide the battery into the compartment and lock it in place.

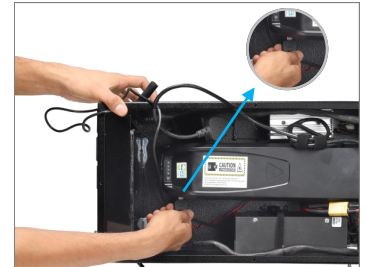

- The battery is now installed in the controller box.



Plug in the Charging Cable

- Connect the charging cable to the controller box.




- Plug the other end into the universal adapter.




External Battery

- Connect the XT90 Power Cable (Not Included) to the battery connector.

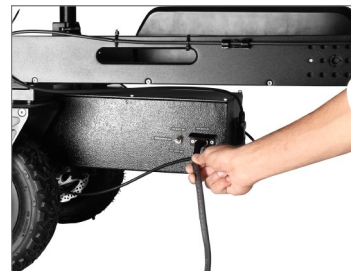

- Attach the other end of the XT90 cable to the external battery (Not Included).

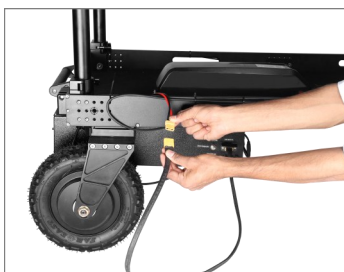

- External battery installation is complete.



YOUR PROAIM MOVEMATE MOTORISED CART UPGRADE KIT ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.