



SnapHold Car Mounting System (CM-SNHD-01)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



6" Suction Cups



14" Rod



18" Rod with Clamps on Both Sides



20" Rod with Clamp & 32 to 38mm Bush



22" Rod with Clamp



2 x Rope



1 x L-Type Allen Key
(Size: - 6mm)

INDEX

Sr. No	Particulars	Page No.
1.	Vehicle Suction Cup Assembly	4
2.	Rod and Suction Cup Assembly	4-6
3.	Rope Attachment	6
4.	VI-ARWV-5 Arm Attachment	7
5.	Fully Assembled Overview (Optional Accessories Shown)	8

Vehicle Suction Cup Assembly

- Remove the cap from each suction cup.



- Attach the suction cups to the top of the car.

Note: Ensure the surface is clean and free of dust, dirt, or moisture before placing the suction cups.



- Push the suction cup pump inward until the red line is no longer visible.



- Repeat for all three suction cups.



Rod and Suction Cup Assembly

- Loosen the knob on the suction cup.
- Insert the 14" rod into the suction cup.



- Re-tighten the knob.
- Repeat the same step on both sides.
- The base rod is now secured.



- Insert the 20" rod with the clamp into the 14" rod and tighten the knob.



- Tighten the Clamp bolt using a 6 mm Allen key.



- The primary rod connection is secure.



- Insert the 22" rod with the clamp into the 20" rod and tighten the knob.



- Insert the 22" rod into the rear suction cup and tighten the knob.



- Rear support rods are securely in place.



- Insert the 20" rod with a clamp into the 18" rod with clamps and tighten the knob.



- The side extension rods are in place, and the rod and suction cup assembly is now secure and ready for use.



■ Rope Attachment

- Lock the rope ratchet into the knob.



- Tighten the hook and lock it in the car door gap.

Note: Attach the rope to any suitable part of the car to ensure stability and safety.



- The rope is now firmly attached.




VI-ARWV-5 Arm Attachment

- Attach the VI-ARWV-5 (Not included) to the bush (32 to 38mm) , then tighten the knob.



- Attach the Gimbal (Not included) to the VI-ARWV-5.

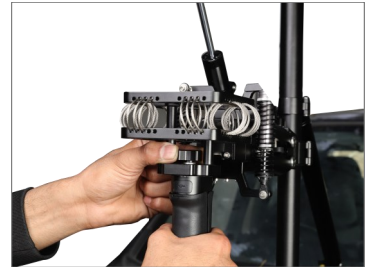

- Your setup is now ready for use.



**YOUR PROAIM SNAPHOLD CAMERA CAR MOUNTING SYSTEM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one-year warranty for our products from the date of purchase. Within this period, we will repair it without charge for labor or parts. The warranty doesn't cover transportation costs, nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subject to inspection and evaluation by us.

Liability: We are not liable for damage caused by products we do not supply or from mishandling in transit, accident, misuse, neglect, or lack of care of the product or service by anyone other than our company.

Contact Us: If you are dissatisfied, please contact us immediately. We promise our utmost support and care until you use our product.