

PR◊AIM

9ft Camera Crane Jib Arm (P-9)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Front Section



Central Post



End Section



LCD Monitor



2 x Spanner (Size: - 17mm)
1 x Spanner (Size: - 13mm)



Allen Key L- Type
(Size: -6mm)



Weight Shank



Weight Closers



Tools Bag



Bag

INDEX

Sr. No	Particulars	Page No.
1	Assembling the Central Post	4
2	Assembling the End Jib Section	5-6
3	Assembling the Front Jib Section	6-7
4	Monitor Assembly Setup	8
5	Final Setup	9

■ Assembling the Central Post

- Place the central post on top of a stand (**Not Included**).




- Insert the knob into the designated slot on the central post.




- Tighten the knob to secure the central post firmly on the stand.




- Using the 17mm spanner, loosen the bolt on the central post.
- Take out the bolt along with the washer.

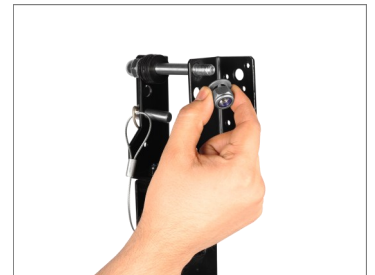

- Unscrew and remove the screw from the central post bracket.

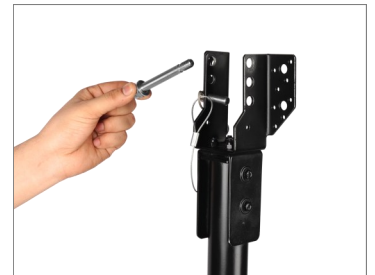

- Pull out the locking pin to complete the setup preparation.
- The central post is now ready for jib assembly.

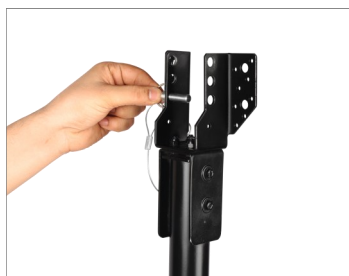

Assembling the End Jib Section

- Place the End section of the jib on top of the central post and secure it.



- Insert the screw into the jib.
- Attach the washer



- On the other side, attach the washer first, then fix the bolt to the screw.



- Tighten the bolt firmly using a 17mm spanner.




- Remove all four caps as shown in the image.



- All four caps have been removed.




- Remove all screw from the jib.

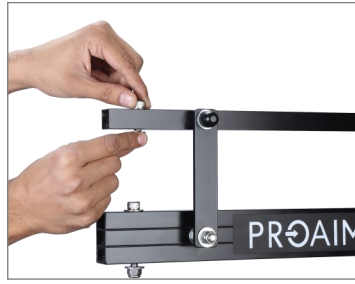

■ Assembling the Front Jib Section

- Attach the front section to the middle section as shown in the image

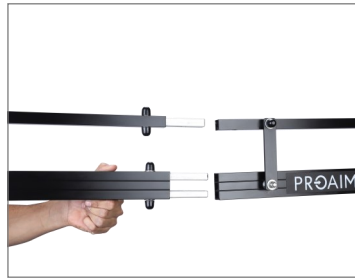


- Insert screw into the designated hole.



- Insert the corresponding bolt.
- Tighten the bolt using the 13mm spanner and 6mm Allen key.




- Insert screw into the designated hole.
- Insert the corresponding bolt.

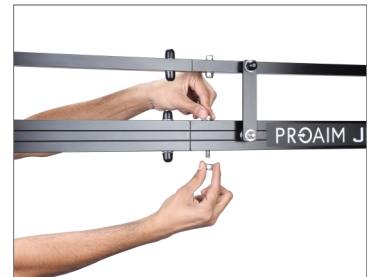

- Tighten the bolt using the 13mm spanner and 6mm Allen key.



- Place all four screw caps back onto the assembly.

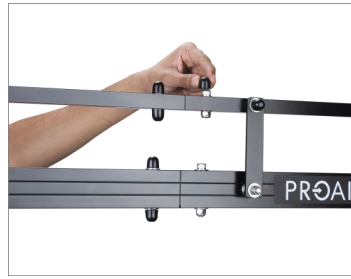

- The setup is ready



- Insert the weight shank into the end section hole.



- Attach the weight slide (**Not Included**) onto the shank.




- Attach the weight closers to the weight shank.

Note: The weight closers rotate 360° and slide automatically into position.



- The weight closers are now securely attached to the end section of the jib.

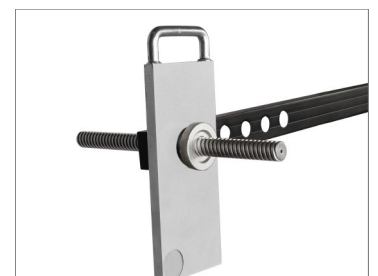

■ Monitor Assembly Setup

- Loosen the knob on the LCD monitor arm.



- Remove the knob and attach the monitor arm to the central post.



- Reattach and tighten the knob.



- Tighten the other knob on the LCD monitor arm as shown in the image.



- Mount the monitor (**Not Included**) onto the LCD monitor arm.
- Tighten the knob to secure the monitor.



**YOUR PROAIM 9FT CAMERA CRANE JIB ARM
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.