



Proaim Monitor Articulated Arm for Video Camera Cart (VCTR-MA-01)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Articulated Mounting Arm



Rod
Length – 32" | Ø38mm



L-Type Allen
Key 4mm



2 X Monitor Articulated
Arm

INDEX

Sr. No	Particulars	Page No.
1	Monitor Articulated Arm Setup	4
2	Monitor Arm Clamp Mounting Setup	4
3	Rods Assembly	4-5
4	Adjustable Arm Mounting	5
5	LCD Monitor Mounting	6-7
6	Final Setup	7-8

Monitor Articulated Arm Setup

Monitor Arm Clamp Mounting


- Loosen the ratchet knob and open the clamp.



- Position the clamp on the rod and securely tighten the ratchet knob.



- Repeat the same process for the second clamp.

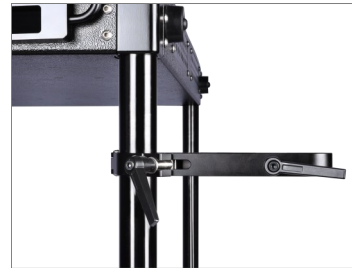


Rods Assembly

- Loosen the ratchet knobs on both clamps.



- Insert the rod through the clamp holes.

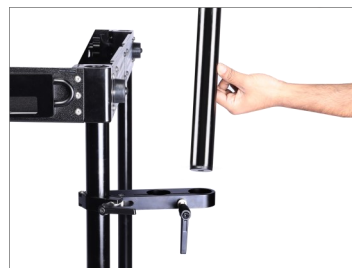

- Tighten both ratchet knobs to firmly secure the rod in place.




- The rod is now securely attached to the clamps.



Adjustable Arm Mounting

- Open the adjustable arm.

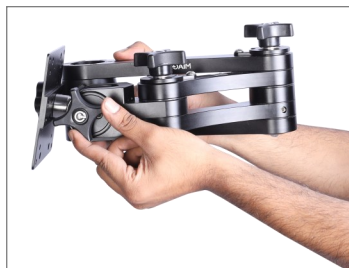

- Loosen the knob on the adjustable arm.
- Mount the adjustable arm along with the VESA Mount onto the Rod.



- Tighten the knob to secure the assembly.







- The adjustable arm is securely mounted on the rod.





LCD Monitor Mounting

- Remove the VESA mount knob.
- Loosen the grub screw using the 4mm Allen key and detach the VESA mount.
- Place the VESA Mount on the back of the LCD monitor (**Not Included**) by aligning it with the threaded holes.
- Insert the bolt (**Not Included**) and tighten it using a 3mm Allen key (**Not Included**).
- Repeat the process for all bolts to fully secure the mount.
- Attach the LCD monitor to the VESA Arm.

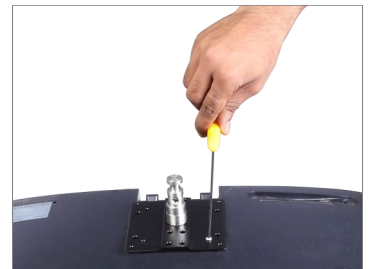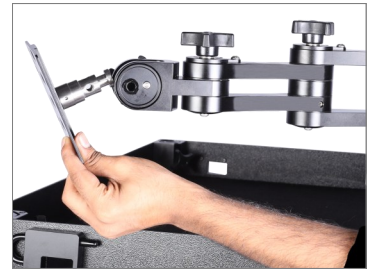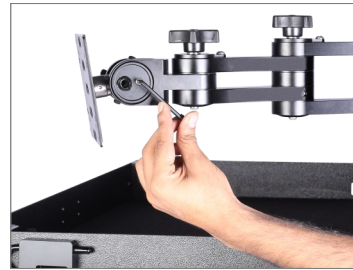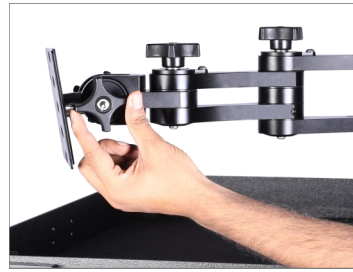

- Tighten the grub screw using the 4mm Allen key.
- Reinsert the knob into the VESA mount and tighten it.

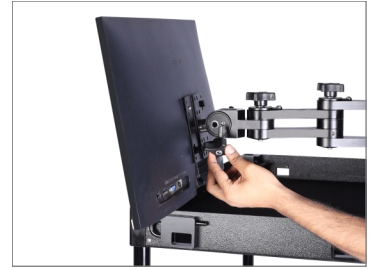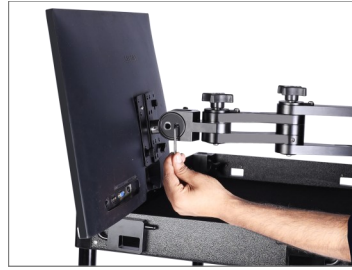

- The setup is now ready for use.



**YOUR PROAIM MONITOR ARTICULATED ARM FOR VIDEO CAMERA CART
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.