

PROAIM Track Wheel Set for Portable Dolly (DW-PRTD-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



3 x Track Wheels

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Track Wheel Setup

Portable Dolly Assembly (Not Included)


- Loosen the Bolt of the Portable Dolly (Not Included) using the 13mm spanner (Not Included).



- Remove the Bolt nut, washer, and Bolt.



- Repeat the same steps to remove the Bolts from the other side of the Dolly.

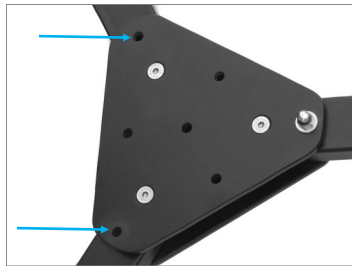

- Stretch out its legs and open the Dolly.



- After opening the Dolly, re-insert all the Bolts, washers, and Bolt nuts.



- Re-tighten all the Bolt nuts using the 13mm spanner.

NOTE: The three center bolts will not be removed while opening the Dolly.



Track Wheel Assembly

- Loosen the grub screws of the Portable Dolly using the 4mm Allen Key (**Not Included**) to remove the Dolly wheels.



- Follow the same process to remove the remaining wheels.



- Insert the Track wheel into the Dolly's leg.



- Re-tighten the grub screws using the 4mm Allen Key (**Not Included**).



- The Track wheel is securely attached to the Dolly.



- Follow the same process to attach the remaining track wheels.

Feature: It features a 360° swivel for versatile movement on straight and curved tracks.



Wheel Mounting on Compatibility Track

- Mount the dolly on the track (**Not Included**) as shown in the images.
- Your Portable Dolly is ready to use.

Feature: These wheels are perfect for 1-2" track systems, including aluminum and PVC pipes.



YOUR PROAIM TRACK WHEEL SET FOR PORTABLE DOLLY ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.