

PR→AIM

Alpha Mobile Workstation: Stand, Laptop & Accessory Tray VESA Monitor Mount (TP-ALPA-02)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Alpha Docking Universal Support Stand with 5/8" Baby Pin Mount



VESA Monitor Mount



Proaim Alpha 3 x Wheels with Brakes



1 x Hook



Proaim Alpha Workstation Tray



1 x Workstation Tray Holder



Proaim Alpha Tool Tray



4 x Knobs

4 x Washers




2 x Springs

INDEX


Sr. No	Particulars	Page No.
1	Alpha Stand Setup	4
2	Alpha Wheels Setup	4-5
3	Alpha Workstation Tray Setup	5-6
4	Alpha Tool Tray Setup	6
5	Hook Setup	6-7
6	VESA Monitor Mount Setup	7-8
7	Screen Rotation Adjustment	8-9
8	Alpha Stand Adjustable Leg Setup	10
9	Final Setup	10

Alpha Stand Setup

- Loosen the knob of the Alpha stand and spread its legs on the floor.
- Secure the legs using the knobs at the top and bottom.
- Loosen the knob to adjust the stand height. Set it to the desired level, then tighten the knob securely.

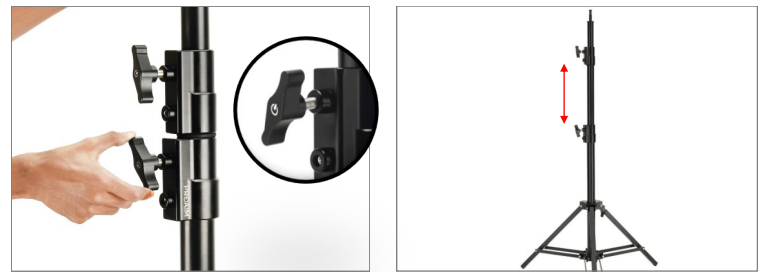

Note: The Alpha Stand has 3 adjustable sections with quick-lock knobs for easy height Adjustment.

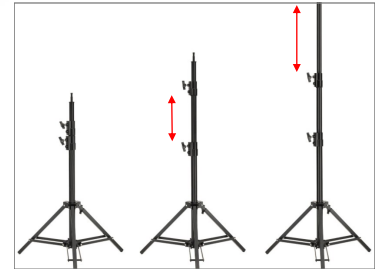

Alpha Wheels Setup

- Using a 3/16" Allen key (**Not Included**), loosen the grub Screw of the Alpha wheels.



- Properly insert the alpha wheels into the Alpha support stand.

Note: The set includes three pneumatic wheels with 360° rotation for smooth mobility.



- Secure the wheels using the 3/16" Allen key (Not Included) and push the locking lever to stabilize.

Note: Each wheel is secured to the stand's leg with a locking lever and has a specially designed footbrake that keeps the stand completely steady, stable, and secure for reliable parking.



Note: Roll your stands smoothly around a set or location with Proaim Wheel Set, which combines perfectly with Proaim Alpha Support Stand and any 1x1" Square Legs Stands.



Alpha Workstation Tray Setup

- Loosen the clamp knob of the workstation tray holder and then mount it onto the alpha support stand.



- After mounting the workstation tray holder, tighten the clamp knob.



Note: Its tool-less mounting clamps make it super quick to connect, adjust & disconnect from a stand without hassle.



Note: Proaim Alpha Workstation/Case Tray transforms your C-Stand into the best standing & moving laptop workstation that you can take where your work requires it to be.



Alpha Tool Tray Setup

- Slide the Alpha Tool Tray onto the stand leg and secure it by tightening the four knobs at the back.



- **Note:** The tool tray holds block batteries, small RAID systems, Allen keys, and other essential tools.




Note: It's all set to hold your block batteries, small-sized RAID systems, Allen keys & other essential tools.



Hook Setup

- Loosen the ratchet knob of the hook.

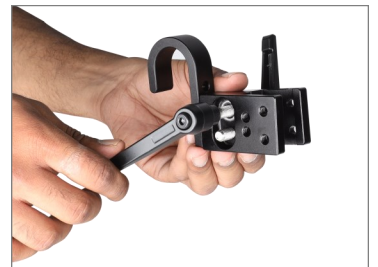

- Attach the hook to the alpha stand and tighten the knob.




- Once attached, the hook can be used to hang a rope, sandbag, or other accessories.



VESA Monitor Mount Setup


- Loosen the locking knob of the monitor mount and attach it securely to the stand.

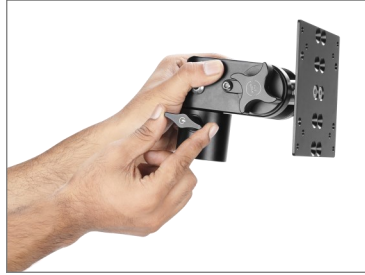

- Tighten the locking knob, then loosen the tilt knob on the opposite side.



- Remove the tilt knob and loosen the grub screw using a 4mm Allen key (Not Included).

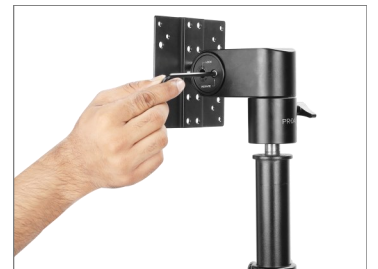

- Detach the monitor mount plate from the mount.



- Attach the monitor mount plate to the screen (Not Included).

Note: Use the 75mm mounting for smaller screens and the 100mm mounting for larger screens.



- Secure the mount plate using the knob.



- Install the four knobs as shown in the image, then mount the screen onto the stand's mounting clamp.



- After attaching the screen, reinstall the tilt knob.



- Tighten the tilt knob, then use the 4mm Allen key to firmly tighten the grub screw.



- Your setup is now ready.



Screen Rotation Adjustment

- Loosen the grub screw using a 4mm Allen key.



- Remove the tilt knob to freely rotate the screen to the desired position.



- Once positioned, place the tilt knob back onto the grub screw and tighten it.



- Use the 4mm Allen key to secure it properly.



- Loosen the tilt knob slightly if you want 360° rotation as needed.



- Your setup is now ready.



Alpha Stand Adjustable Leg Setup

- **Note:** When heavy weight is placed on the Alpha Stand, it may bend slightly (about 2°). To counter this, the stand comes with an adjustable leg.
- Loosen the knob of the Alpha Stand to begin the adjustment process.
- Pull the stand upwards gently to extend the adjustable leg.
- Once extended, tighten the knob to secure the position.
- The adjustable leg is now fully extended, and the stand will realign to a straight position, as shown in the image.



**YOUR PROAIM ALPHA MOBILE WORKSTATION: STAND, LAPTOP
& ACCESSORY TRAY VESA MONITOR MOUNT
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty on our products from the date of purchase. During this period, we will repair the product free of charge for labor or parts. The warranty does not cover transportation costs or products that have been misused or accidentally damaged. All warranty repairs are subject to inspection and evaluation by our team.

Liability: We are not liable for any damage caused by third-party products, mishandling during transit, accidents, misuse, neglect, or unauthorized servicing of the product.

Contact Us: In case of any dissatisfaction, please contact us immediately. We are committed to providing the utmost support and care to ensure your satisfaction with our product.