



## Mitchell Base to Bowl Camera Adapter | 75mm. (BP-302-02)



---

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Mitchell Base to Bowl Camera Adapter (75mm)



Washer



2 x Bolts (Size: 1/4 x 25)



2 x Mini Washers  
(Size: 6 x 12 x 1.5)



1 x L-Type Allen Key (Size: 3/16")

## Mitchell Base to Bowl Camera Adapter (75mm) Setup

- Attach the 75mm bowl adapter onto your stand (**Not included**) and secure it firmly.

**Note:** The Mitchell Base to 75mm Bowl Adapter provides you with a multitude of mounting possibilities owing to its smart design.



- Loosen and remove the knob from your fluid head (**Not included**) as shown in the image.



- Mount the fluid head onto the 75mm bowl using the central screw.



- Place the washer on the fluid head screw at the bottom of the stand aligning it with the center.



- Tighten the washer firmly using the knob to secure the assembly.




- Press the red button to remove the top plate.



- Remove its top plate from the fluid head easily as shown in the image.



- Align the threads of your camera (Not included) with the plate carefully.
- Use a screwdriver to tighten the screw securely, ensuring the camera is firmly fixed to the plate.

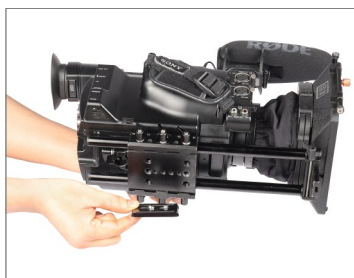

- Slide the camera-mounted plate onto the fluid head.



- Secure the camera in place by pressing the red button on the fluid head.
- Setup is now ready for use.



**YOUR PROAIM MITCHELL BASE TO BOWL CAMERA ADAPTER | 75MM.  
ALL DRESSED UP AND READY TO GO!**



**(SHOWN WITH OPTIONAL ACCESSORIES)**

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please contact us immediately and we promise our utmost support and care until you use our product.